

DVR Manager

User's Guide

(v 3.3)



Contents

OVERVIEW	6
1. PC system requirements	6
2. Installing program	7
DVR Manager Monitor	9
3. Running monitor program.....	9
4. Screen mode	10
4.1. Screens split.....	10
4.2. Full screen	10
4.3. Screen mode alteration	10
4.4. Screen repositioning.....	10
5. DVR list.....	10
5.1. Registering at My DVR.....	11
5.1.1. Registering remote DVR	11
5.1.2. Registering from Local Area DVR list.....	12
5.1.3. Registering from WRS list.....	12
5.2. Editing DVR information	13
5.3. DVR status	13
5.4. Viewing image	14
5.5. Quick recording	15
5.6. PTZ.....	16
5.7. Changing frame rate.....	16
6. Group mode.....	17
6.1. Registering group	17
6.2. Editing group information	18
6.3. Deleting group	18
6.4. Viewing images	18
7. Auto sequence.....	19
8. Log.....	19
8.1. Stopping log scroll	20
8.2. Viewing log	20
8.3. Viewing log image	20
8.4. Viewing the recorded log image.....	20

8.5. Text log	21
9. Option configuration	21
9.1. Direct X.....	22
9.2. Caption	22
9.3. Date/Time Caption Format	22
9.4. Quick recording	22
9.5. Misc. (Miscellaneous).....	23
10. Audio	24
11. Microphone	24
12. Relay out.....	24
DVR Manager Playback	25
13. Selecting and connecting DVR & Backup file	25
14. Search.....	26
14.1. Image information	26
14.2. Selecting channel	27
14.3. Changing search period	27
14.4. Searching calendar	27
14.5. Searching log.....	28
14.6. Searching text.....	28
15. Play	29
15.1. Play control button	29
15.2. Playing audio	29
16. Controlling image	30
16.1. Controlling zoom/brightness/contrast	30
16.2. Saving image	31
16.3. Printing image.....	31
17. Backup function	31
18. (Backup Log) Function.....	32
DVR Manager Configuration Tool	33
19. Interface	33
19.1. Site tree	34
19.2. Menu.....	34

20.	Configuration.....	34
20.1.	System setting	34
20.1.1.	Camera	35
20.1.2.	IP camera	36
20.1.3.	Time/Date	37
20.1.4.	Connectivity	38
20.1.5.	COM port	40
20.1.6.	PTZ	41
20.1.7.	Text	44
20.1.8.	Audio	45
20.1.9.	User account	46
20.1.10.	User authority	47
20.1.11.	IP filtering.....	48
20.1.12.	Storage	49
20.1.13.	Miscellaneous.....	49
20.1.14.	System Log.....	50
20.1.15.	Time scheduling	50
20.1.16.	MD	52
20.1.17.	Input.....	53
20.1.18.	IP sensor	53
20.1.19.	Relay / Buzzer / Email	54
20.1.20.	E-Mail	55
20.1.21.	IP relay	56
20.1.22.	Recording	56
20.1.23.	Alarm recording	57
	DVR Manager ConfigStation.....	59
21.	Login and Configuration.....	59
21.1.	Information Tab	60
21.2.	System Tab	61
21.3.	Network Tab	62
21.4.	User Tab.....	63
21.5.	Camera Tab	64
21.6.	HDD Tab	65
21.7.	Schedule Zone Tab.....	66
21.8.	Normal Rec Tab	67
21.9.	Alarm Rec Tab	68

21.10.	Security Tab	69
21.11.	Device Tab	70
21.12.	Alarm Act Tab.....	71
21.13.	Alarm Source Tab	72
21.14.	Miscellaneous Tab	73
21.15.	PTZ Tab	74

OVERVIEW

DVR Manager is software for managing HUNT ELECTRONIC Inc.'s HVR (HVR-04, HVR-08, HVR-16E, HVR-16Q). Three separate programs: Monitor, Playback, and Configuration Tool, ConfigStation comprise the DVR Manager.

By installing the DVR Manager on a Windows 2000 Professional or XP PC, monitoring real-time and recorded images on remote DVR is possible via Intranet or Internet.

It enables user to search recorded image from HDD of DVR and playback it.

To manage multiple channels easily, DVR Manager supports camera list and group mode.

<Note – DVR Manager >

- Configuration Tool should be used above HVR F/W Version 3.x for firmware configuration.
- ConfigStation should be used for HVR F/W Version 1.x/2.x firmware configuration.
- To view a list of the registered DVR, it should be used correct F/W version for Configuration Tool / ConfigStation
- DVR Registering/Editing/Deleting should be used only at the DVR Manager Monitor / Playback.
- It is impossible to register, edit, and delete the DVR at the Configuration Tool / ConfigStation.
- It recommended that the number of available DVR connecting to DVR Manager is less than 16. In case of more than 17, starting up time of program is longer, reaction time is slow, and connection close problem is happened.

1. PC system requirements

	Minimum	Recommended
CPU	Intel Pentium III 600Mhz	Intel Pentium III 1.6Ghz
Memory	128MB	512MB
VGA	16MB	128MB
Resolution	1024 x 768	1024 x 768
HDD storage space	5MB	1GB or higher
OS	Windows 2000 Professional SP4 or above	Windows XP SP2 or above
Others		DirectX 8.1 or higher

Before installing program, check the PC specifications. DVR Manager may not perform correctly if PC does not meet minimum requirements.


DVR Manager is designed to be the only program running at any given time. If several programs run simultaneously with DVR Manager, unpredictable errors may occur.

When using video driver provided by Microsoft, display may blip severely and not function normally. In this case you should not use Direct X or install latest driver provided by video card manufacturer.


2. Installing program

1) Run “DVR Manager v2.x.x.exe” file from the DVR Manager Setup CD.


2) Press “I Agree” button.

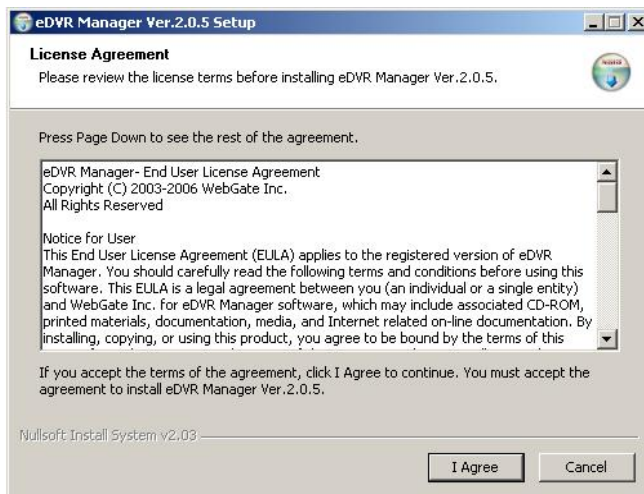

3) To use all DVR Manager function, the below five components should be checked and press “Next” button (Configuration Tool is for HVR v3.x and ConfigStation is for HVR v1.x, v2.x)

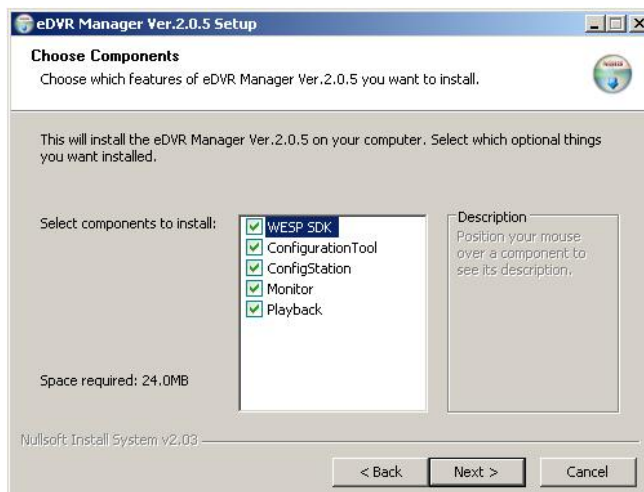


4) Select a directory (folder) to be installed and press “Install” button.

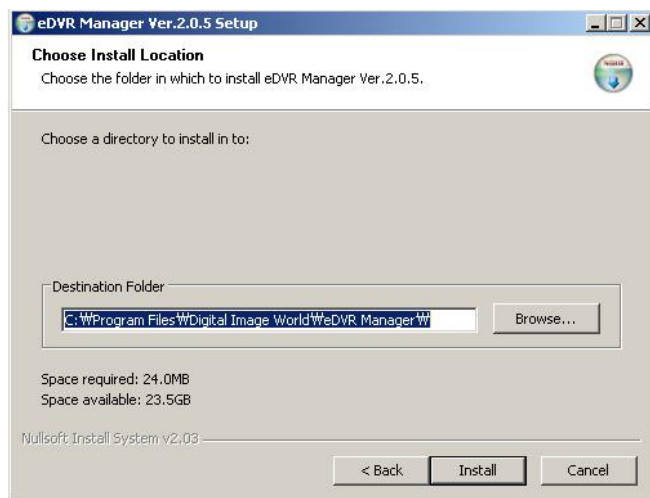

5) Press “Close” button to exit an installation.

DVR Manager Monitor

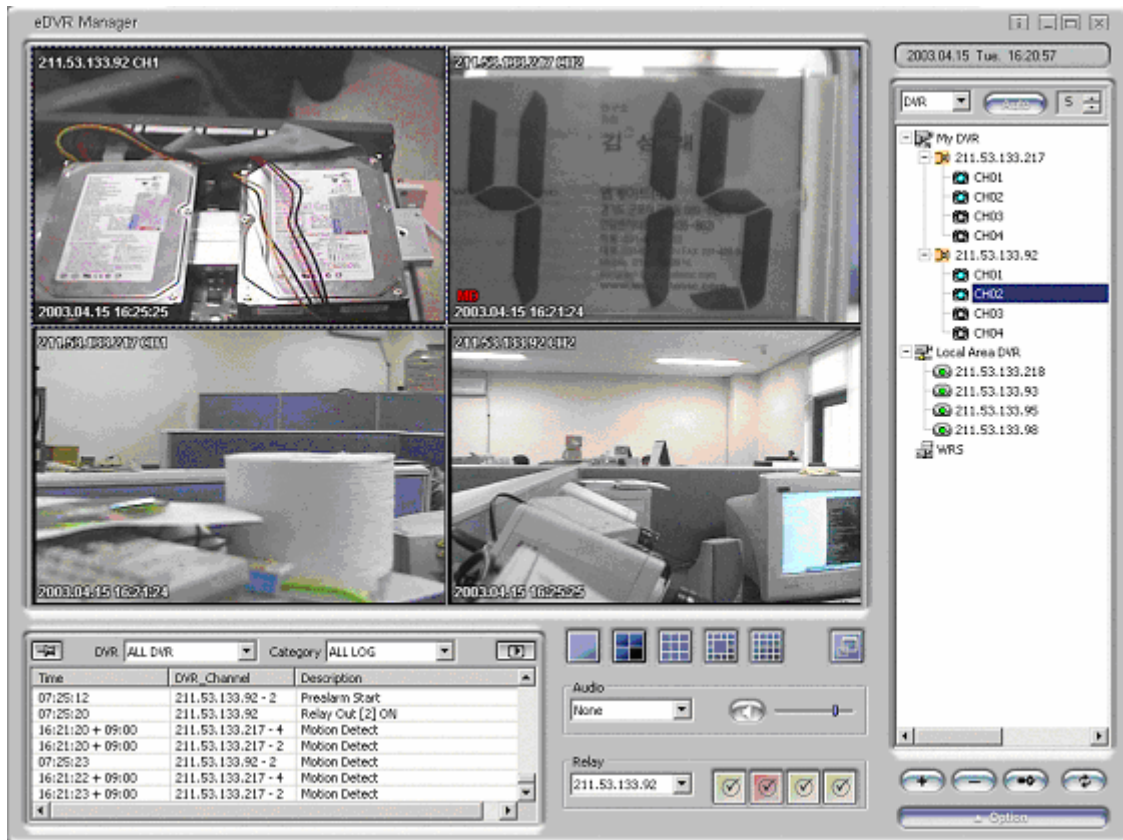

3. Running monitor program



Select 'Digital Image World' folder registered in all programs after selecting "Start" button of Windows. And run 'DVR Manager Monitor' registered at the 'DVR Manager'.


4. Screen mode

4.1. Screens split



Supports 1/4/9/13/16 split screens.

4.2. Full screen

Press  or “Alt + Enter” button, for full screen mode. In order to go back to previous mode, press “Esc” or “Alt + Enter” button.

4.3. Screen mode alteration

Double-click one image within any split screen mode, one channel mode will result. In order to go back to previous mode, double-click again.

4.4. Screen repositioning

Image screen array can be altered by drag and drop method.

5. DVR list

DVR list has three default folders: My DVR, Local Area DVR, and WRS. In order to access DVR and monitor images, register DVR at My DVR folder.




5.1. Registering at My DVR

5.1.1. Registering remote DVR

Register DVR installed in the remote site.


<Note>

- DVR registering only can run at DVR Manager Monitor / Playback program.
- Configuration Tool / ConfigStation cannot register DVR.

1) Click  icon or right click mouse and select “Add DVR.” The below screen entitled “Add new DVR” will appear.

2) Select DVR F/W to register F/W version.

According to the DVR version, F/W version should be checked correctly.

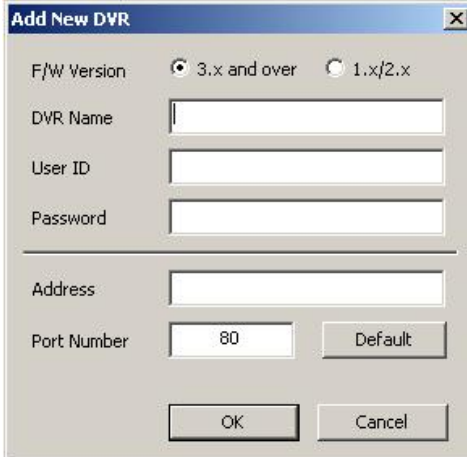

-In case of selecting v3.x and over, ‘Port Number’ will be displayed shown as the upper right figure.

- In case of selecting v1.x/2,x, ‘Port Assignment’ will be displayed shown as the lower right figure.



3) Enter DVR Name, User ID, Password, Address, Port and press “OK” button.

<Note>

- Enter the values such as User ID, Password, IP or name and Port. These values should be identical with settings in the relevant DVR.
- The default values of User ID/Password are admin/admin.
- DVR can be assigned a name that can be up to 24 characters in English.


5.1.2. Registering from Local Area DVR list

- 1) Drag & drop a DVR among local area DVR list into “My DVR”. A pop up screen entitled “Edit DVR” will open.
- 2) Enter DVR Name, User ID, Password and Port, and press the “OK” button.


<Note>

- Local Area DVR automatically lists, detects and refreshes DVR on the local network.
- The information on My DVR is applied to DVR Manager Monitor, Playback, and Configuration Tool screen.
- The registered DVR as F/W Version 3.x is displayed at “Configuration Tool” and as F/W Version 1.x/2.x is displayed at “ConfigStation”.


5.1.3. Registering from WRS list

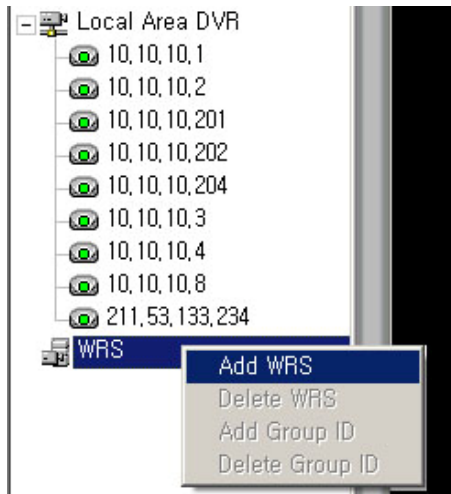

- 1) Click “Add WRS” among pop-up menus of WRS folder by right clicking the mouse, and enter Registration Server (www.HUNT_Electronicinc.com or mycam.to).
- 2) Click “Add Group ID” among pop-up menu, and enter Group ID. If Group ID is not changed, default is “newbie”.
- 3) Drag & drop into “My DVR” folder. “Edit DVR” screen will open.
- 4) Enter DVR Name, User ID, Password and Port, and then press “OK” button.

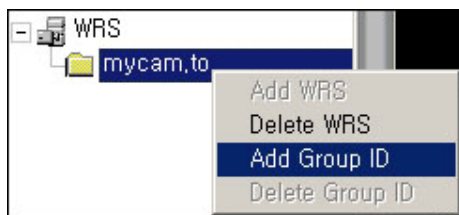

5.2. Editing DVR information

Click  or select “Edit DVR” from pop-up menu.



The "Add New DVR" dialog box contains the following fields and options:

- F/W Version:** Radio buttons for ☒ 3.x and over and ☐ 1.x/2.x.
- DVR Name:** A text input field.
- User ID:** A text input field.
- Password:** A text input field.
- Address:** A text input field.
- Port Number:** A text input field containing "80" and a "Default" button.
- Buttons:** "OK" and "Cancel" buttons at the bottom.



The "Add New DVR" dialog box includes an additional section for port assignment:

- Port Assignment:** Radio buttons for ☒ Normal and ☐ Firewall, with an "Advanced" button.
- Buttons:** "OK" and "Cancel" buttons at the bottom.

<Note>

- DVR Name may be edited with one click after selecting DVR icon.

5.3. DVR status



: Connected normally (Orange color)



: Fail to connect (Gray color and X mark)



: Fail to login (Gray color)


5.4. Viewing image



In order to view images, select a channel from DVR list.

If it is connected normally, image will appear. If not, error message will be indicated.

If it takes more time to receive images after connecting, “Loading...” message will show. If connection fails due to lack of network bandwidth, it will retry to connect.

 Cam #1 (Gray) means “before connecting”,  Cam #1 (Blue) means “normal connection”, and  Cam #1 (Red) means “fail to connect”.

5.5. Quick recording

Place mouse cursor on live image, and right click the mouse. Click “Rec Start” for instant recording.



“REC 00:03” will appear on the upper right of the image. In order to stop recording, click “REC Stop.” If user doesn’t manually stop recording, it will automatically stop after ten minutes.

<Note>

- User can designate a recording drive. (Refer to “Option Configuration Tool”)
- Quick Recording folder is created at the recording drive, and its data is stored in the folder whose name is DVR and channel.
- The recorded file name will be named using the following format “YYYYMMDD_HHMMSS.re4”, and the file name will refer to the time of recording initialization.
- The recorded file can be replayed with DVR Manager Playback program.

5.6. PTZ




Select an image to control PTZ, and click “PTZ” among pop-up menu after right clicking the mouse.

<Note>

- In order to control PTZ, PTZ camera should be connected to the related DVR and its menu before set up.
- As for installation and setting, refer to relevant installation guide and user guide.

5.7. Changing frame rate

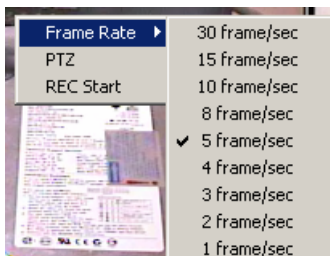


Select an image, right click, and click “Frame Rate”


<Note>


- Default value of DVR Manager Monitor program is 5 ips(5frame/sec).


6. Group mode

Select “Group” from the combo box  on the upper screen

6.1. Registering group

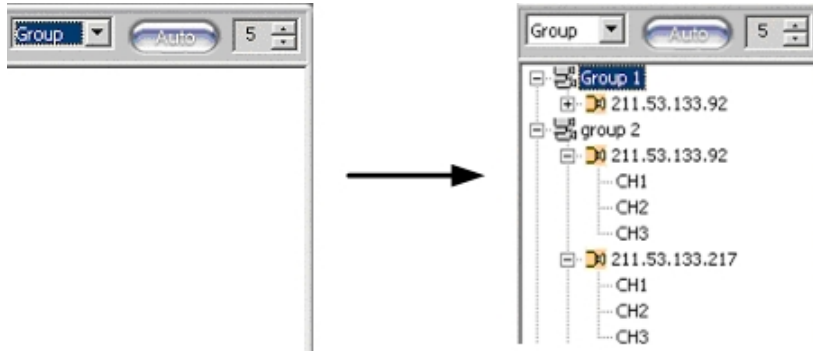

- 1) Click  or move mouse to group list and right click mouse and select “Add”.
- 2) Enter Group Name, and select channel(s) to register.

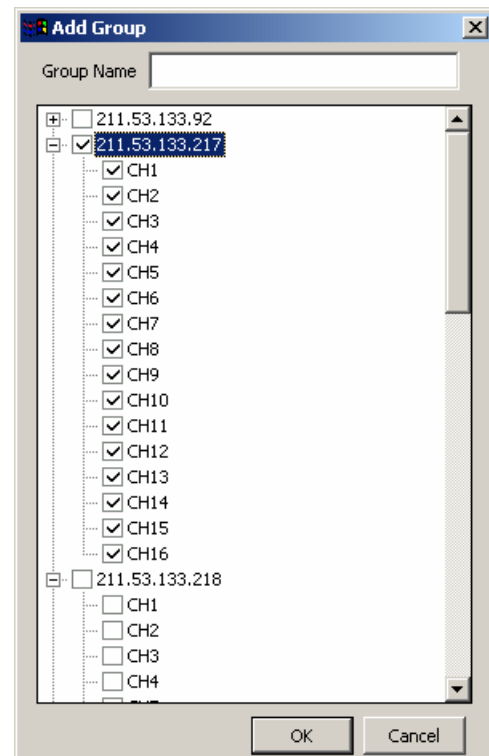

<Note>

- Group number is not limited, but a maximum of sixteen groups is recommended.
- All group names should be different.
- Each group is limited to sixteen channels.
- Group name can be up to 24 characters in English.


6.2. Editing group information

- 1) Edit group information by selecting group. Click  in the lower part of list or select “Edit” by right clicking mouse.
- 2) Edit group name, then click “OK”.

<Note>

- If change of registered group information can not be done, this is why ‘Auto’ button is activated. In this case user should click ‘Auto’ button one more time not to activate.


6.3. Deleting group

- 1) Select a group click  in the lower part of list or select “Delete” by right clicking mouse.
- 2) Press “OK” button to confirm.

<Note>

- If an image within the group is viewed currently, the group can't be deleted.

6.4. Viewing images

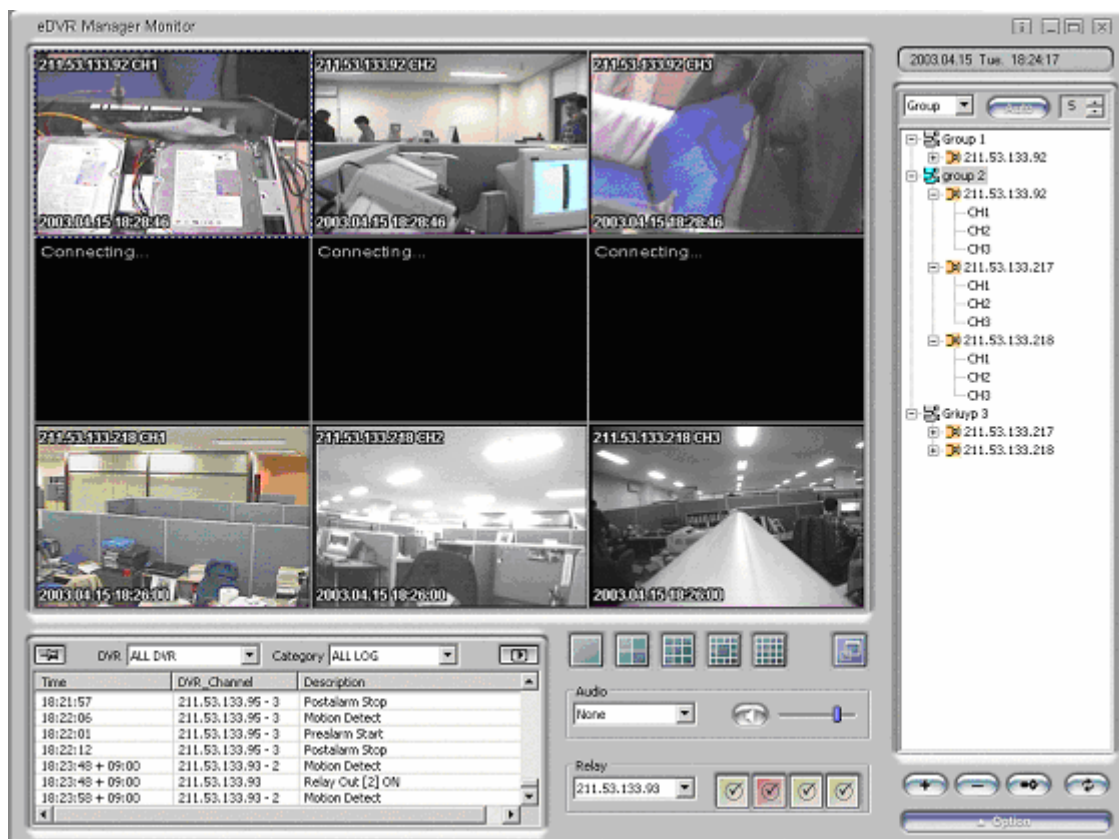



Click the group icon to monitor images.


<Note>

- Screens are automatically split according to number of channels within the group.


7. Auto sequence

- 1) Set sequential duration by pressing 
- 2) In order to stop sequence mode, press  again.

<Note>

- In DVR mode, images can be viewed within a split screen. 1, 4, 9, 12, or 16 channels can be viewed simultaneously.
- In group mode, the split screen will be set according to number of channels within that group.
- In auto sequence mode, the time duration can be set between 5 and 60 seconds. Default value is 5 seconds. Time duration cannot be altered while images are being viewed.
- Click  button one more time to stop auto sequence.

8. Log

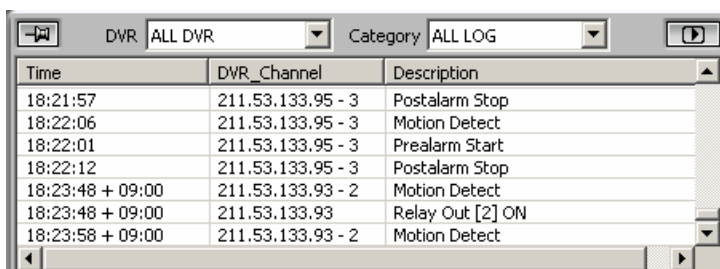



Time	DVR_Channel	Description
18:21:57	211.53.133.95 - 3	Postalarm Stop
18:22:06	211.53.133.95 - 3	Motion Detect
18:22:01	211.53.133.95 - 3	Prealarm Start
18:22:12	211.53.133.95 - 3	Postalarm Stop
18:23:48 + 09:00	211.53.133.93 - 2	Motion Detect
18:23:48 + 09:00	211.53.133.93	Relay Out [2] ON
18:23:58 + 09:00	211.53.133.93 - 2	Motion Detect

The log screen displays changes in status for each respective DVR registered on “My DVR.”. When it is disconnected because of network problem, it tries to reconnect at specific time period.


<Note>

- A maximum of 1000 logs can be created and they will be deleted in the list if an amount over 1000 or 10 minute is over since reception.
- If a DVR is deleted from My DVR, the corresponding log is also deleted.

8.1. Stopping log scroll

If new log is received, it will be added at the bottom of log list and scrolled automatically. In order to stop scrolling, press  button.  button will appear and Scrolling will stop.

<Note>

-  (Red) means new scroll receiving.

8.2. Viewing log

- 1) In order to view log for a specific DVR, select DVR at DVR combo box.
- 2) In order to view the specific type of log, select the related category in the category combo box.

<Note>

- Logs can be viewed as ALL LOG, EVENT LOG, ERROR LOG, STATUS LOG, and TEXT LOG.

8.3. Viewing log image

Double click log on the log list to view images.

<Note>

- In case of channel log, the image of relevant channel will be displayed in full mode.
- In case of log relating to relay and record start, the image of all channels will be displayed.


8.4. Viewing the recorded log image

Select a log from log list and press  button in the right part.


The DVR Manager Playback program runs and images are viewed.

<Note>

- If DVR Manager Playback is currently running, the following message will appear.

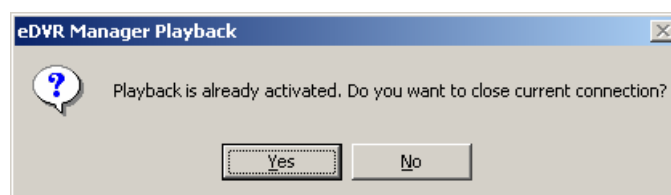

8.5. Text log

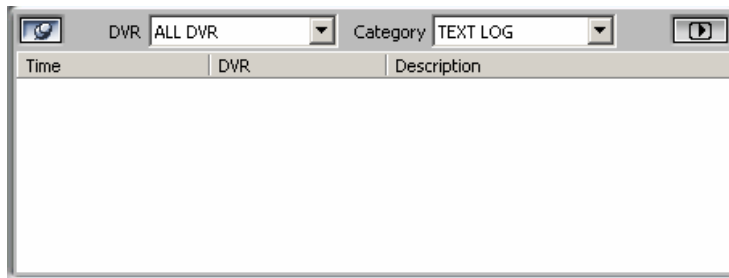



Text log contains text entered within DVR. This display mode is different from other category.

<Note>

- Up to 3 lines of text are displayed per log.

9. Option configuration

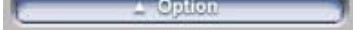Press  in the right lower part, then option configuration page will appear.

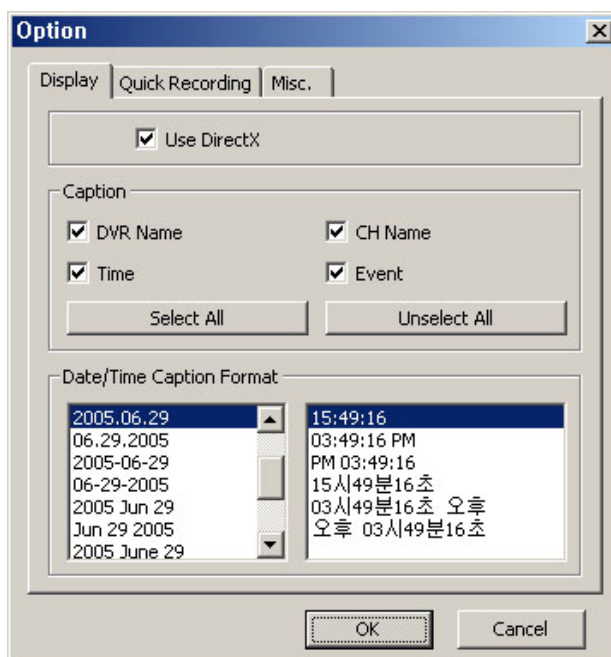

Setting such as “Display”, “Quick Recording” and “Misc” can be done in it.

9.1. Direct X




On the “Display” tab set whether DirectX is to be used for viewing images.

<Note>


- For this function, DirectX drive should be installed on PC.
- This function enables to advance performance by 30%.
- If screen flickers when using DirectX, disable use of this function.

9.2. Caption

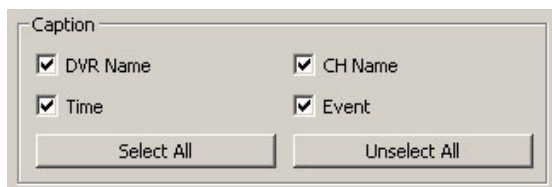


Set on the “Display” tab, and information will appear overlapped on the image.

9.3. Date/Time Caption Format

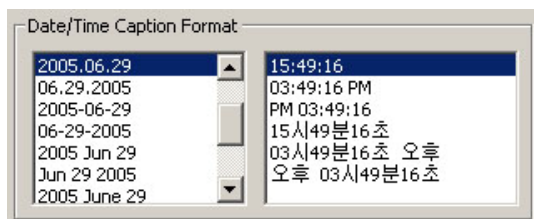


Set on the “Display” tab, display method can be selected.

9.4. Quick recording

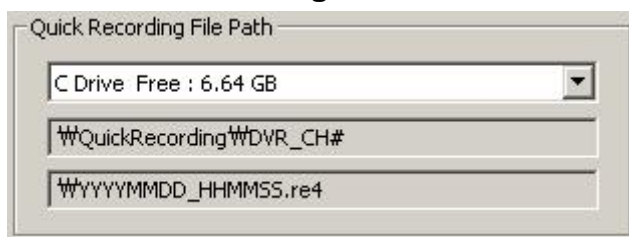

Set on the “Quick Recording” tab, and the drive directory for quick recording can be selected.

9.5. Misc. (Miscellaneous)

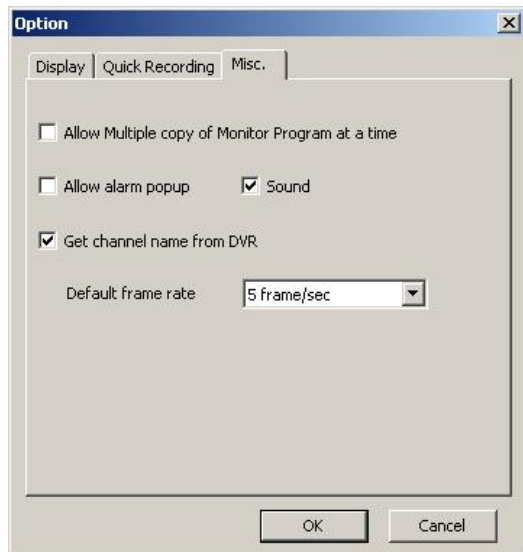

Allow Multiple copy of Monitor Program at a time

In case of running more than two monitor programs, it should be checked.

Unless, two monitor programs cannot run at the same time.

Allow alarm popup

The function to pop up Alarm (MD, Sensor) image on the single screen.

Get channel name from DVR

The channel name is displayed as either one, user can use name recorded in the monitoring program or name recorded in the server. If this setting is checked name recorded in the server will be used.

Default frame rate





Configure default frame rate to use at the Monitor program.

<Note>

- "Get channel name from DVR" function can affect channel name in the monitoring image and in the upper left part of playback image.


 

10. Audio




- 1) Select DVR to play audio.
- 2) The icon  will be gray and change into  (Red) when it receives audio.
- 3) Re-click on the icon when red and it will change into . Audio reception will stop.
- 4) Use  to control volume.



11. Microphone



 - 1) Select DVR to input mike.
- 2) Use  to control volume.
- 3) When clicking on  button, it will change into  and mike input will stop.

12. Relay out




- 1) If changed status of Relay Out is received (On \leftrightarrow Off) or DVR is selected, button will be changed into .
- 2) If user clicks on the relevant Relay Out () button, opposite command (On \leftrightarrow Off) for current status will be running. Relevant log will be sent and button color will be changed to relevant status after status is changed into as requested.


<Note>


The setting of System / Security / Remote Relay should be enabled to use this function.
If you need more detailed information, refer to HVR User's Guide.

DVR Manager Playback

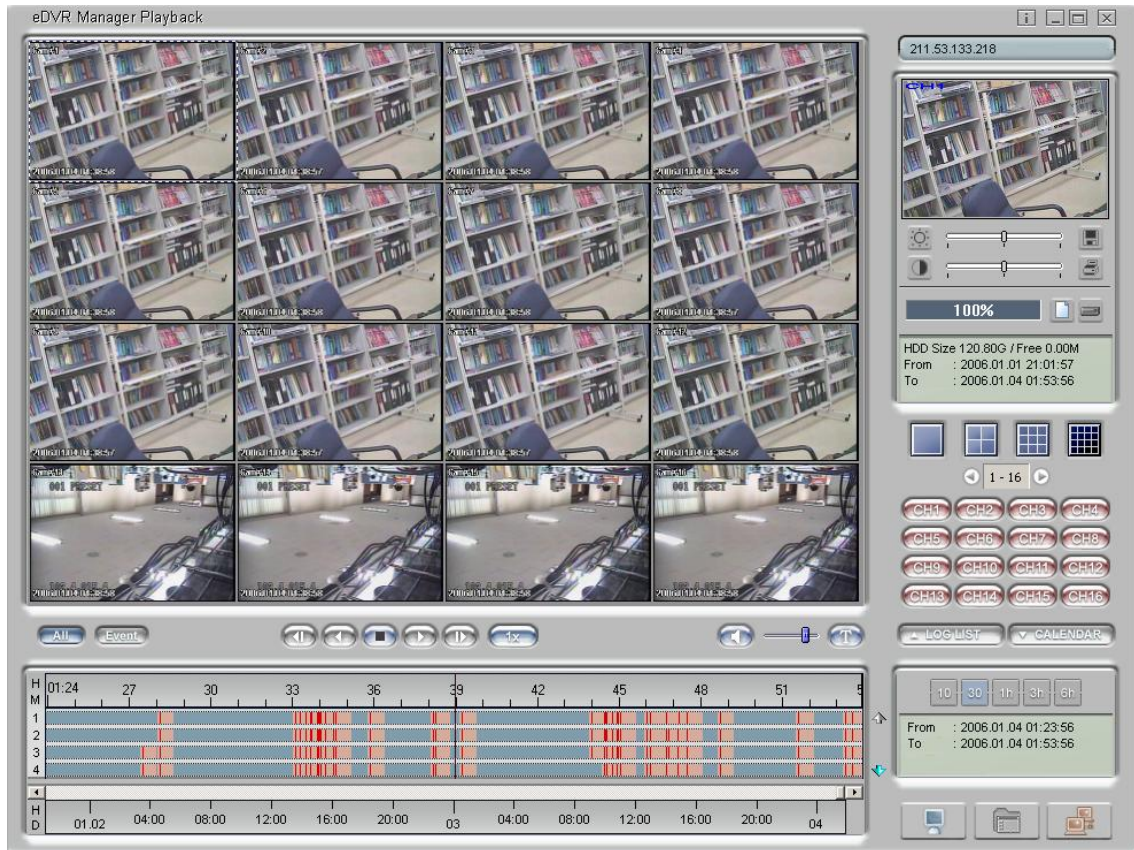


13. Selecting and connecting DVR & Backup file

- 1) Click  on the lower right hand side of the screen.
- 2) DVR Explorer screen will appear. To select recorded backup files, click on “Open Backup File” button or select DVR.

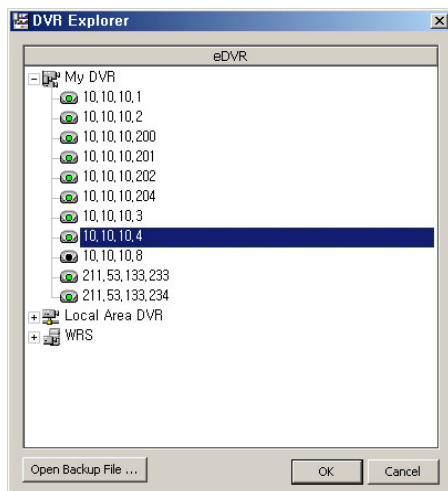


<Note>

- When User ID and Password are stored, login into playback is accomplished automatically. If automatic login process has failed or User ID and password is not stored, a screen requiring User ID and password will open.
- If password for backup file is required, a window requiring password will appear.

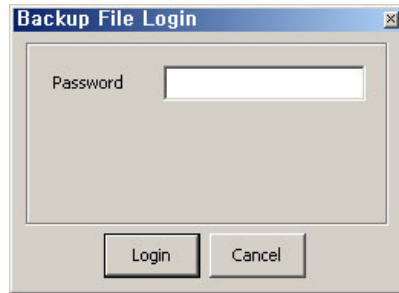


- By double clicking backup file, DVR Manager Playback program will run automatically. However if it is already open, the following window will appear.

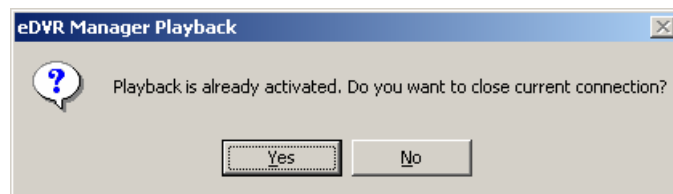

- If backup file is currently accessed, user only has to press the "Connect" button in order to regain access.



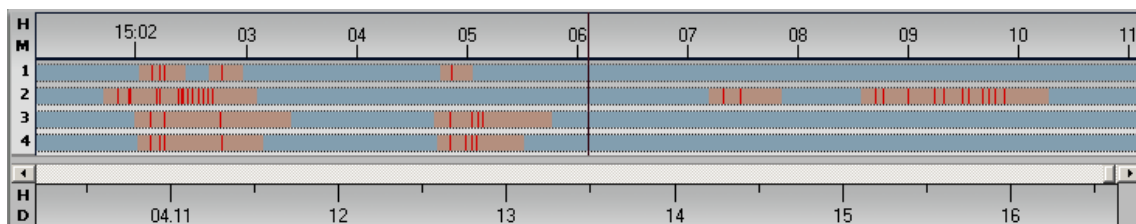

14. Search


14.1. Image information






The depth of color indicates recorded frame rate.(Darker colors indicate faster recording speed). Red line indicates the time of Event (Motion detection, Sensor, etc) recording. Magenta () indicates Pre/Post alarm.

14.2. Selecting channel

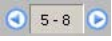Select screen division (1/4/9/16) with pressing the     buttons.

As for DVR having more than 8 channels user can playback other channel in the 4 channel division mode by clicking on  button.

If there is any channel to move to in the screen division mode, the button will be activated (). If not, the button will not be activated ().

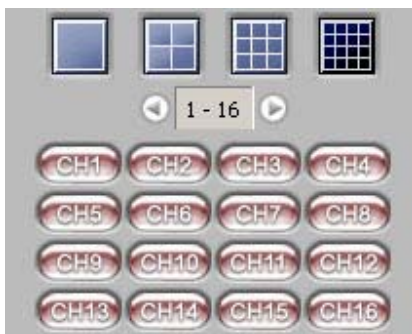

<Note>

- Screen division can be done according to number of channel of DVR. For example, HVR-08 can not support 16 screen divisions.


14.3. Changing search period


Use     .

<Note>

- Click on icon to change search period from 10 minutes, 30 minutes, 1 hour, 3 hours, or 6 hours.


14.4. Searching calendar

Click on , and icon will appear. Select date and time to quickly view video. Click “GO” and images from that time and date will appear.

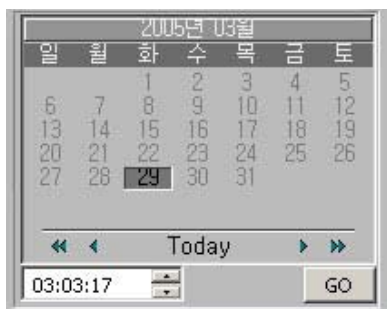

14.5. Searching log

Press  button.

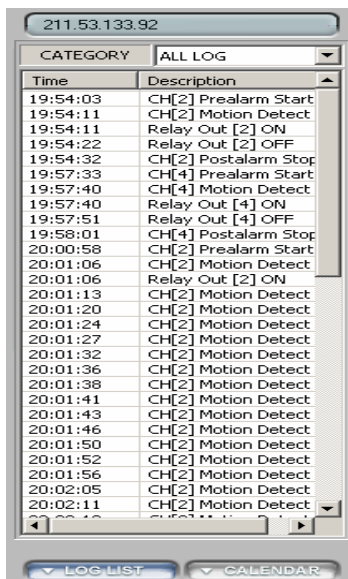


<Note>

- Log list shows the related channel's log, and user can search by category.
- Double click on a log, the log moves to the related time and corresponding video.

14.6. Searching text

Press  button.

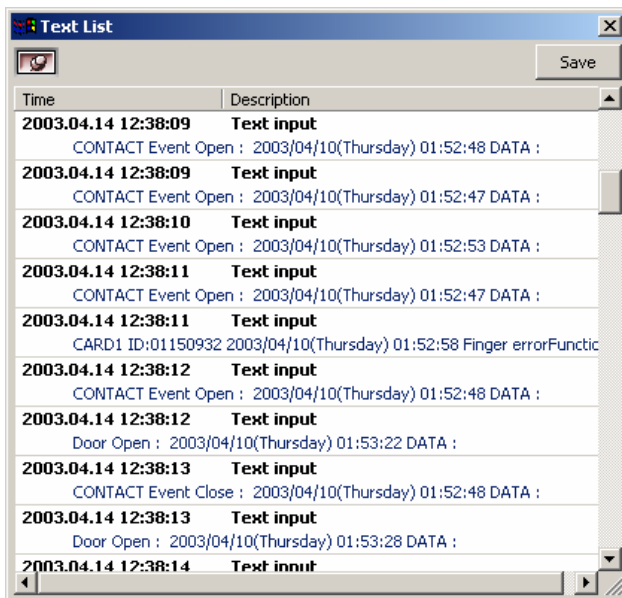

<Note>

- Double click on a log and text moves to the related time.
- Press the "Save" button; text and video can be saved as text file format.

15. Play

15.1. Play control button

All / Event

Toggled. Playback of all images. Event indicates playback for only event images



Prev

Backwards replay of one image frame by frame



Reverse Play

Backwards replay



Stop

Stop movement of replay



Play

Play forward



Next

 
Replay frame by frame



Speed (1x)

Designate playback speed (0.5x, 1x, 2x, 4x, 8x, 16x, 32x, 64x, ALL)




* if clicking on 1x" button, the slide bar to set speed will appear.



<Note>

- Playback speed is close to real time (except "All"), but it may be affected by network bandwidth.

15.2. Playing audio

Audio can be played back only at "1X" speed and "All" mode. If audio is received,  button will flicker. Use  for controlling volume. Click audio button and  appears, audio status will be mute.

16. Controlling image

16.1. Controlling zoom/brightness/contrast



Select an image, and the image will appear in the upper right portion of the playback screen.



Drag the part in the image with mouse.

To control image expansion, you may utilize +(expansion) and -(reduction) button of keyboard. If dragging zoomed area below 20 pixels or clicking another position except the area, expansion function is cancelled.



is for controlling brightness.



is for controlling contrast.

Default value is 1000 / 0.

16.2. Saving image



button is for saving selected image including memo and caption as a 'bitmap' file.

Saving can be done in only stop mode.

16.3. Printing image



button is for printing the selected image; a memo can be attached to the image.

<Note>

- Default printing is for A4 size paper.
- Memo can be for a maximum of 5 lines, and each line is limited to 45 characters.
- All text two seconds before and after the corresponding image will appear on the print out with the image and max 9 line texts can be printed out.

17. Backup function




button is for back up of data.

The image shows a 'Backup Utility' dialog box with the following fields and controls:


- From:** Date: 2005-06-29, Time: 16:15:26
- To:** Date: 2005-06-29, Time: 16:44:06
- File Split Size:** 750 Mbytes
- Size:** 665.19M, **Frame Count:** 33709
- Channel:** A grid of checkboxes for CH1 through CH16. CH1, CH2, CH3, and CH4 are checked.
- File Name:** A text input field with a browse button (...).
- Password:** Two text input fields labeled 'Password' and 'Verify'.
- Progress Bar:** A bar showing 0% completion.
- Start:** A button to begin the backup process.

Enter backup period (date & time), channel, file name and password. Press "Start" button.

18. (Backup Log) Function

“Backup Log” runs by pressing backup () button.

Backup Log function is to backup log information as excel file format except for images.

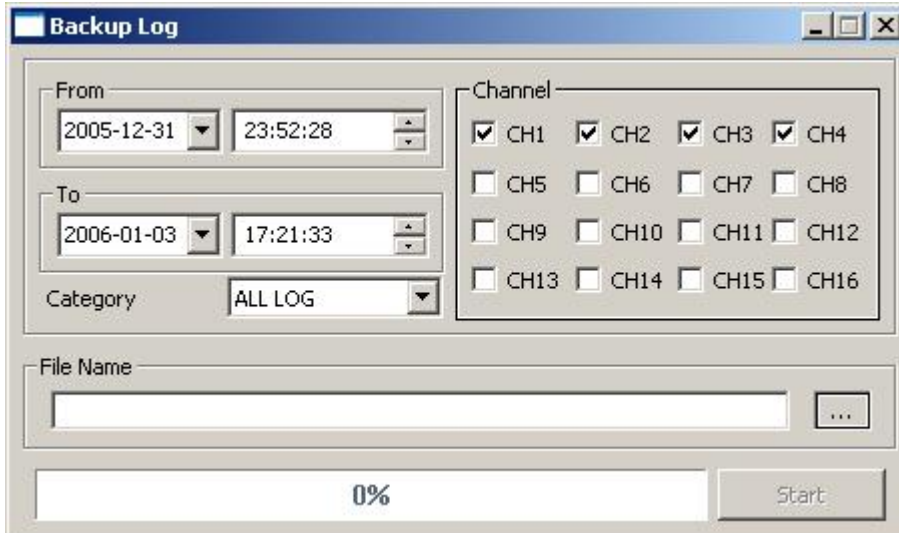


The screenshot shows a "Backup Log" dialog box with the following fields and controls:



- From:** Date: 2005-12-31, Time: 23:52:28
- To:** Date: 2006-01-03, Time: 17:21:33
- Category:** ALL LOG
- Channel:** A grid of checkboxes for channels CH1 through CH16. CH1, CH2, CH3, and CH4 are checked.
- File Name:** A text input field with a browse button (...).
- Progress Bar:** A progress bar showing 0% completion.
- Start:** A button to initiate the backup process.

Press “Start” button to enter backup period (date & time), channel, and file name.

DVR Manager Configuration Tool

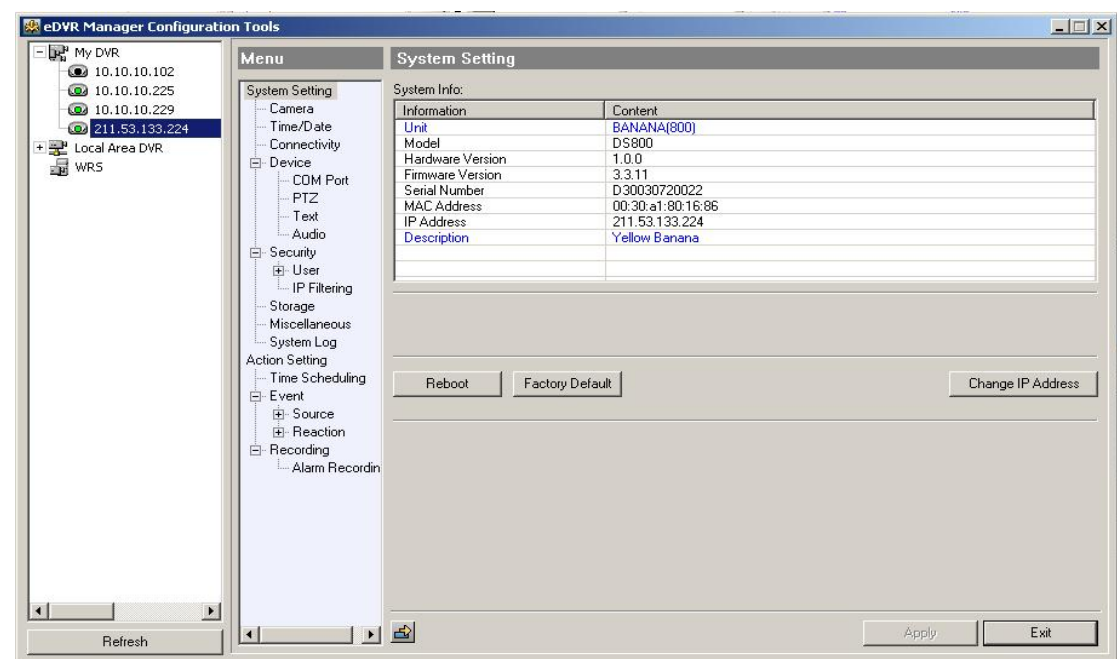

 19. Interface

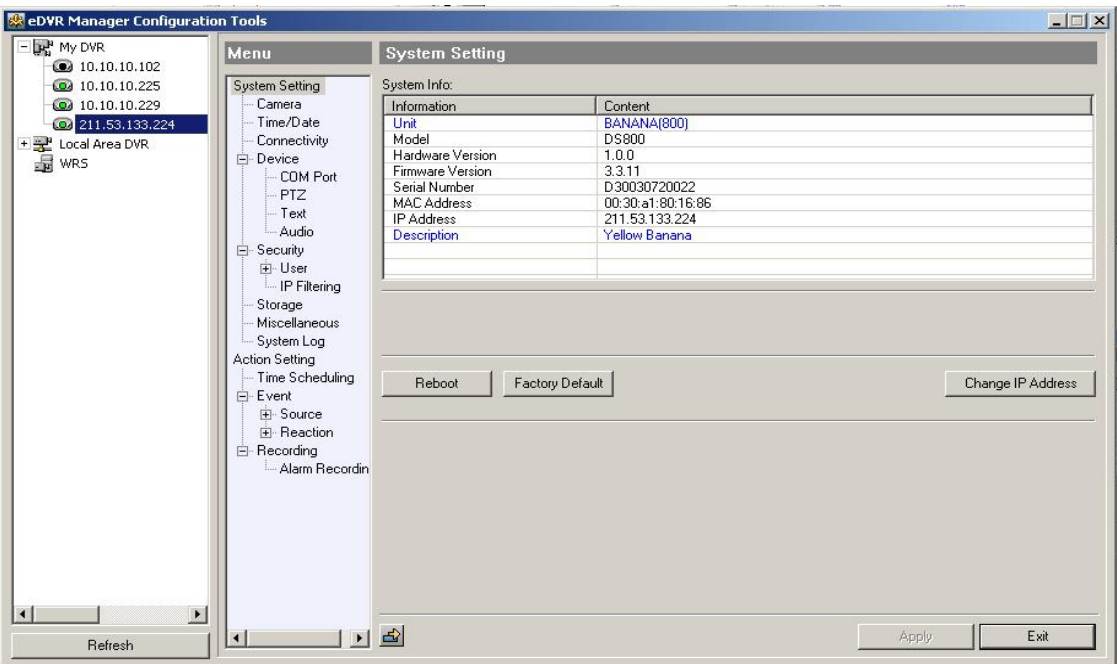

Configuration Tool's screen has Site Tree, Menu and Configuration Page.

User can register DVR and make sub folder at My DVR folder. Also all information registered at My DVR will be shared at DVR Manager Monitor, Playback and Configuration Tool.

19.1. Site tree

Site list of Site Tree is site that is registered at My Sites of Main Vies of Control Center.

User can not register/delete/revise it at Configuration Tool.

The list will be periodically synchronized with My Sites of Control Center, and information will be renewed with pressing Refresh button.

If specific site is pressed on, detailed thing will be show in the menu, and System Setting page also will be shown in the Configuration Page.

Changing IP and accessing of Local Area Sites

Click left button of mouse to open login popup window. Enter Admin Password to connect to relevant site.

Click right button of mouse to open popup menu for Change IP Address. Enter Admin Password and New IP Address to change into new IP Address.

19.2. Menu

Detailed things in the menu are different between model types. If user clicks them in the menu relevant setting page will be shown in the Configuration Page.

20. Configuration

20.1. System setting

The screenshot displays the 'System Setting' window. On the left is a tree view with categories like Camera, Time/Date, Connectivity, Device, Security, and Action Setting. The 'System Info' tab is active, showing a table of system details. At the bottom, there are buttons for 'Reboot', 'Factory Default', and 'Change IP Address'.

Information	Content
Unit	BANANA(800)
Model	DS800
Hardware Version	1.0.0
Firmware Version	3.3.11
Serial Number	D30030720022
MAC Address	00:30:a1:80:16:86
IP Address	211.53.133.224
Description	Yellow Banana


System Info

Basic information of HVR will be displayed and blue lettered Unit and Description can be edited with

double click.

After finishing editing, user should press “Apply” button.

20.1.1. Camera

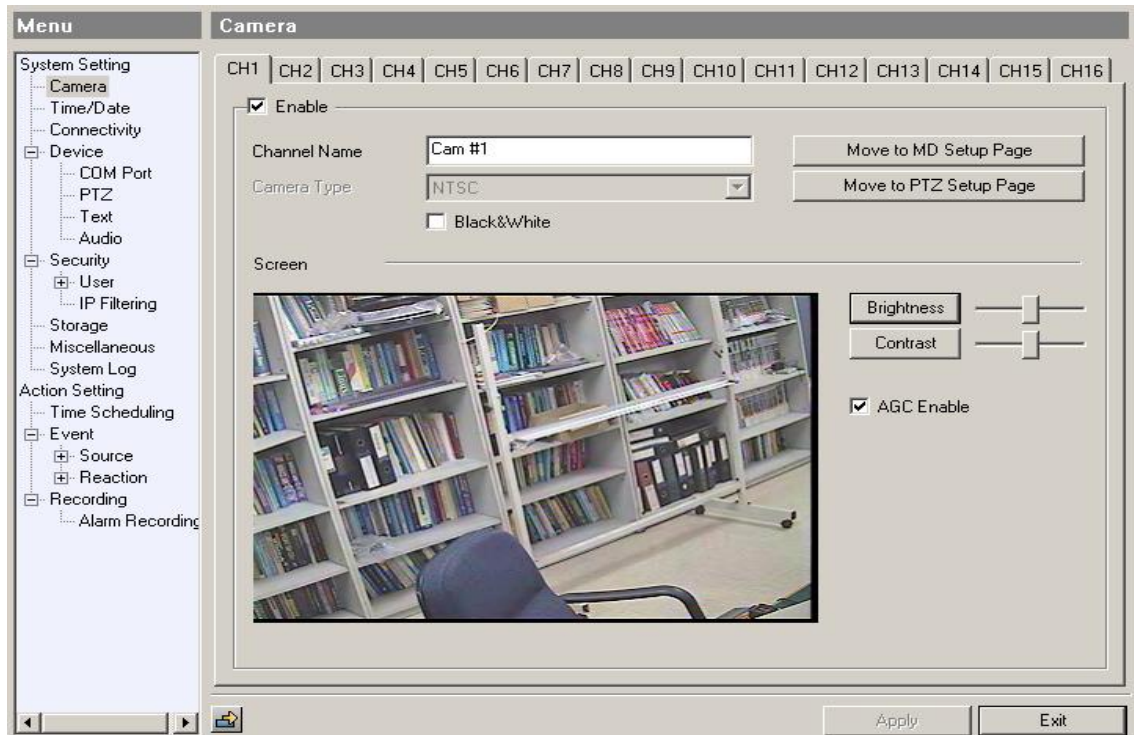

20.1.1.1. Setting video channel

Set basic information, image calibration according to each video channel.

Each tab number is identical with each video channel number

Channel information

- Enable : Set to enable channel
- Channel Name : Enter channel name. Default is Cam #x(x=1~16)
- Camera Type : Select video type (NTSC/PAL)
- Black & White : In case of video is B/W


20.1.1.2. Image calibration

Set Brightness, Contrast and Video Gain for best quality image

<Note>

Refer to installation guide regarding to AGC Enable setting

20.1.2. IP camera

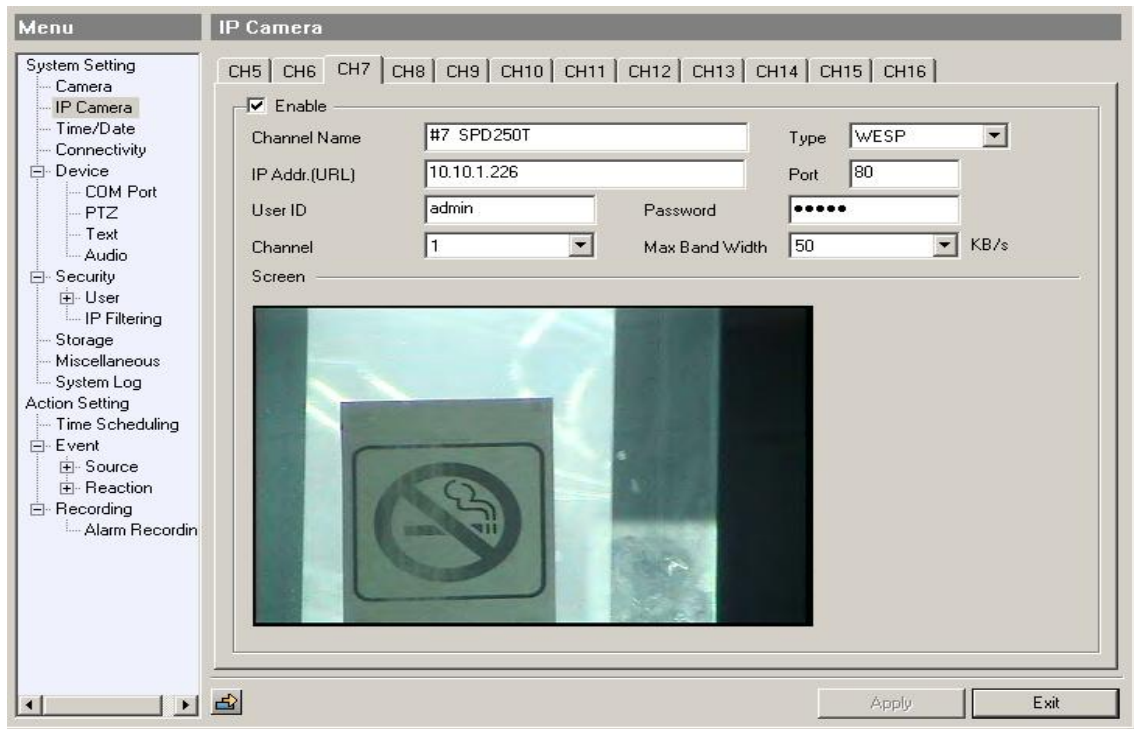

'IP Camera' will be displayed if checking the box of 'IP Camera Enable' in the menu of Miscellaneous.

If not, 'IP Camera' will not be displayed.

As for HVR-04, IP Camera (i-Rec, WebEye, WESP) can be used at CH 5-16.

- Enable : Enable IP Camera.
- Channel Name : Enter channel name of IP Camera.
- IP Addr. (URL) : Enter IP Address or URL of IP Camera
- Port : Enter port of IP Camera
- User ID : Enter user ID of IP Camera
- Password : Enter password of IP Camera
- Channel : Enter channel of IP Camera
- Max Band Width : Enter max bandwidth of IP Camera (default:50 KB/s)
- Type : Enter type of IP Camera (i-Rec, WebEye, WESP)

<Note>

If Max Band Width is set so large, bandwidth of a channel can be used so large. If it is set so small, frame rate of recording / monitoring can be down.

20.1.3. Time/Date

Menu

- System Setting
 - Camera
 - IP Camera
 - Time/Date**
 - Connectivity
 - Device
 - COM Port
 - PTZ
 - Text
 - Security
 - User
 - IP Filtering
 - Storage
 - Miscellaneous
- Action Setting
 - Time Scheduling
 - Event
 - Source
 - Reaction
 - Recording
 - Alarm Recording

Time/Date

Date & Time

2005-06-07 11:03:01

* eDVR only support changing the time via consol.

Timezone & Daylight Saving Time

(GMT+09:00) Seoul

* eDVR only support changing the timezone via consol.

NTP

Mode: Client

Interval: 1 Hour

IP Type: Local IP

Local IP: 10 . 10 . 1 . 201

Apply Exit

20.1.3.1. Setting date & time

Date & Time

Setting Date & Time can be done only in Consol.

Timezone & Daylight Saving Time

Setting of HVR Timezone & Daylight Saving Time can be done only in Consol.

20.1.3.2. Setting NTP

“NTP (Network Time Protocol)” does time synchronization coupled with standard equipment on network.

- Mode : Select server/client. Server provides time, Client is provided with time. If set as “both”, it will perform as both server and client.
- Interval : Select interval relating to receiving time information when NTP mode is client (1/3/6/12/24Hour.)
- Type : Confirm whether NTP server is connected to local network or not (Public IP/Local IP)
- Local IP : Enter NTP server IP if IP type is local IP

20.1.4. Connectivity

The screenshot shows a web-based configuration interface for a device. On the left is a 'Menu' tree with categories like System Setting, Camera, IP Camera, Time/Date, Connectivity, Device, Security, Storage, Miscellaneous, Action Setting, Time Scheduling, Event, and Recording. The 'Connectivity' option is selected. The main window is titled 'Connectivity' and has tabs for 'Network', 'WRS', and 'Option'. The 'Network' tab is active. Under 'Connected By', the 'Ethernet' radio button is selected. Below this, 'Settings for Ethernet' are shown. The 'Use DHCP' radio button is unselected, and the 'Use the Following' radio button is selected. A table of static IP settings is displayed:

IP Address	10	.	10	.	10	.	203
Subnet Mask	255	.	255	.	0	.	0
Gateway	10	.	10	.	0	.	1
DNS#1	0	.	0	.	0	.	0
DNS#2	0	.	0	.	0	.	0
DNS#3	0	.	0	.	0	.	0

At the bottom right are 'Apply' and 'Exit' buttons.

20.1.4.1. When using Ethernet

Select “Use DHCP” to use dynamic IP. Set allotted IP address, subnet mask, gateway and DNS server to use static IP address.

<Note>

Inquire ISP or network manager of things relating to static IP address

20.1.4.2. When using xDSL

The screenshot shows the same web-based configuration interface, but with the 'xDSL' radio button selected under 'Connected By'. The 'Setting For xDSL' section is visible, containing an 'Account' group with 'User ID' and 'Password' fields. The 'User ID' field contains the text 'guest', and the 'Password' field contains five dots. The 'WRS' tab is also visible in the top navigation bar.

Select xDSL in case network is ADSL, HDSL, VDSL and so on. Enter User ID and password.

<Note>

1. xDSL has various types such as ADSL, HDSL, VDSL, it can be used by PPPoE protocol.
2. Must set WRS when using xDSL type. (except using static IP address)

3. Impossible to connect network by using Ethernet, when it is set as xDSL.
4. User ID and password will be provided by xDSL ISP.
5. Network setting must be ethernet though your network is xDSL type if you use automatic connection modem.

20.1.4.3. WRS (Dynamic IP registration sever)

As you can not know exact dynamic IP address of HVR at every moment, WRS that can give its IP address will be needed. It is wholly managed HUNT Electronic for user's convenience.

- Period : Set time interval when dynamic IP address is registered in WRS. In case IP address is changed frequently, user had better set time interval 1minute.
(1minute/1hour/3hour/6hour/12hour/24hour)
- Server : Domain name of WRS that is managed by HUNT Electronic is "mycam.to" or "HUNT Electronicinc.com". User should input its domain name when designating other server.
- Group ID : Selects group where HVR will be registered. Proper group ID is recommended to avoid misunderstanding with other Group ID

<Note>

Dynamic IP registration is applied to following case

- In case of using DHCP on Ethernet
- In case of using xDSL (Except using static IP address)


20.1.4.4. Setting port

- Port : Change port number if not connecting HVR because of firewall.
- Idle Time : Set idle time if connection is closed because of network problem. If waiting time exceeds idle time connection will be fully closed. (0~3600 second)

<Note>

User should reboot HVR when network setting is changed.

20.1.5. COM port

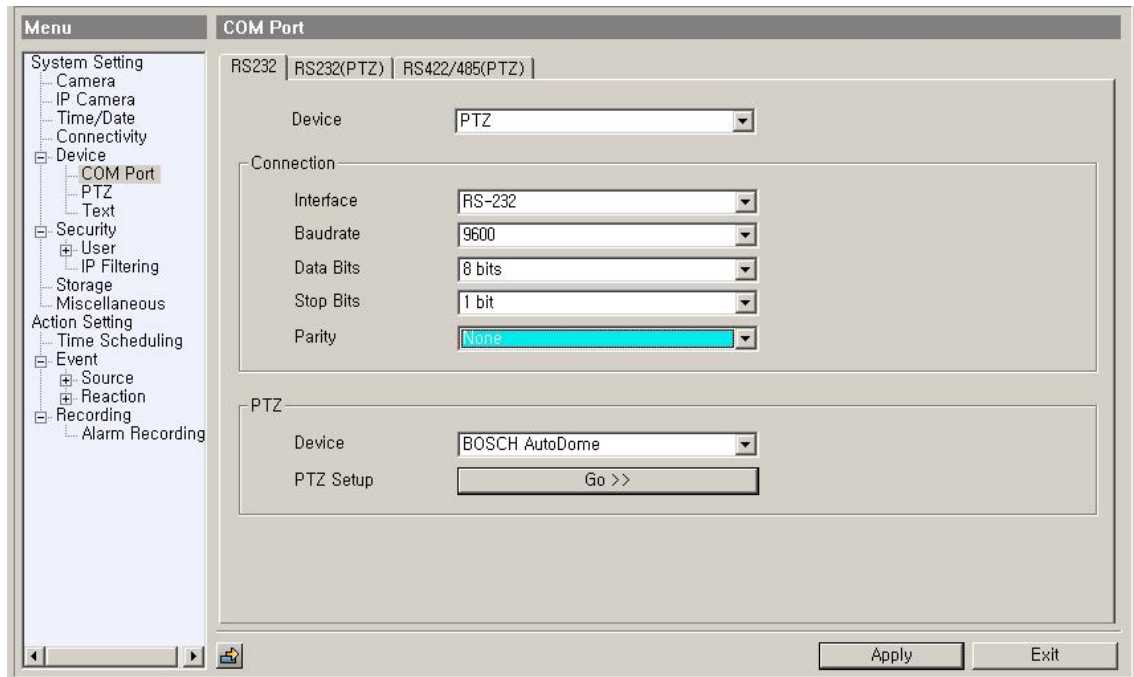


Set connection information and connected device information of each COM Port. Tab number is identical with COM Port number and the first tab means COM1 port.

20.1.5.1. Selecting device for serial port

PTZ, COM and Serial TP can be connected to serial port.

- PTZ : Select it to see detailed setting of PTZ. If want to go to PTZ setting page, click “Go” button.
- Serial TP : Select it to support Transparent Protocol for serial port. Transparent Protocol is Used to bypass serial data on network.
- Text : Select it when device for Text is connected.
- Keyboard : Select it when Keyboard is connected. Refer to HVR User’s Guide about more detailed information of Keyboard.

20.1.6. PTZ

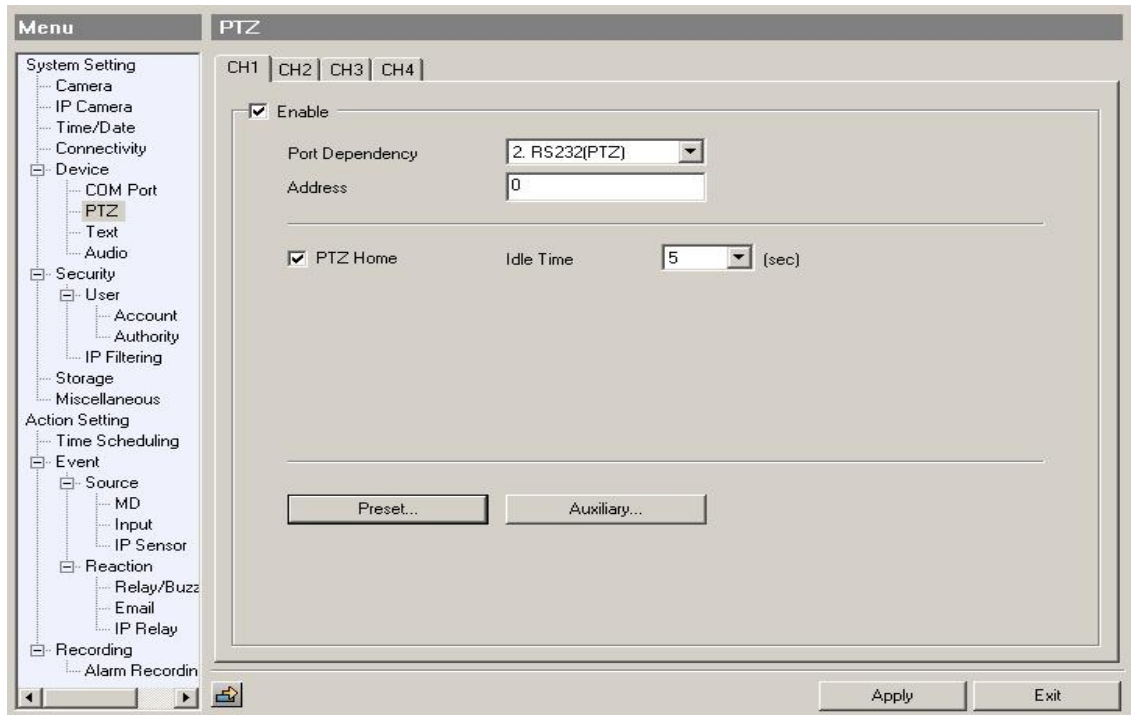

Tab number is identical with channel number. It shows which channel is connected to PTZ.

20.1.6.1. Setting PTZ

Set PTZ in the COM Port page.

- Enable : When relevant channel is connected to PTZ
- Port Dependency : Select serial port for PTZ device. (COM1~3)
- Address : Set Base Address of PTZ device. Setting value of PTZ device should be input.
- PTZ Home : If there is no motion for PTZ Idle Time, it will move to designated Preset.
- PTZ Idle : Idle time for PTZ Home function.

20.1.6.2. Setting preset



If pressing “Preset” button, the window for setting preset will appear.

Saving and Deleting preset

Select preset and adjust its position. Press “Set” button after entering the name.

Press delete button after selecting saved preset.


<Note>

1. PTZ adjustment can be done in pop up menu.
2. User can control Pan/Tilt only when you place mouse cursor inside an image.
3. The zoom control will appear in left side and focus control will appear in right side when you move mouse cursor towards right or left edge of image.

Using Preset

Check whether relevant preset is used.

20.1.6.3. Setting auxiliary

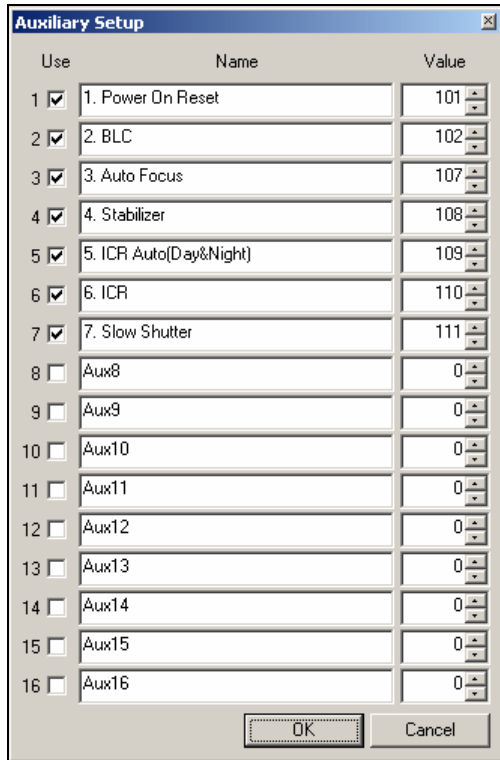


The image shows a software dialog box titled "Auxiliary Setup". It contains a table with three columns: "Use", "Name", and "Value". There are 16 rows in the table. The first seven rows have checkboxes in the "Use" column that are checked, and the remaining nine rows have unchecked checkboxes. The "Name" column contains specific function names for the first seven rows and generic "Aux" names for the rest. The "Value" column contains numerical values for each row. At the bottom of the dialog are "OK" and "Cancel" buttons.

Use	Name	Value
1 <input checked="" type="checkbox"/>	1. Power On Reset	101
2 <input checked="" type="checkbox"/>	2. BLC	102
3 <input checked="" type="checkbox"/>	3. Auto Focus	107
4 <input checked="" type="checkbox"/>	4. Stabilizer	108
5 <input checked="" type="checkbox"/>	5. ICR Auto(Day&Night)	109
6 <input checked="" type="checkbox"/>	6. ICR	110
7 <input checked="" type="checkbox"/>	7. Slow Shutter	111
8 <input type="checkbox"/>	Aux8	0
9 <input type="checkbox"/>	Aux9	0
10 <input type="checkbox"/>	Aux10	0
11 <input type="checkbox"/>	Aux11	0
12 <input type="checkbox"/>	Aux12	0
13 <input type="checkbox"/>	Aux13	0
14 <input type="checkbox"/>	Aux14	0
15 <input type="checkbox"/>	Aux15	0
16 <input type="checkbox"/>	Aux16	0

Click “Auxiliary” button to set up.

PTZ device provides diverse auxiliary functions including Pan/Tilt/Zoom. If user clicks on set up button, dialogue box for setting 16 auxiliary will appear.


20.1.7. Text

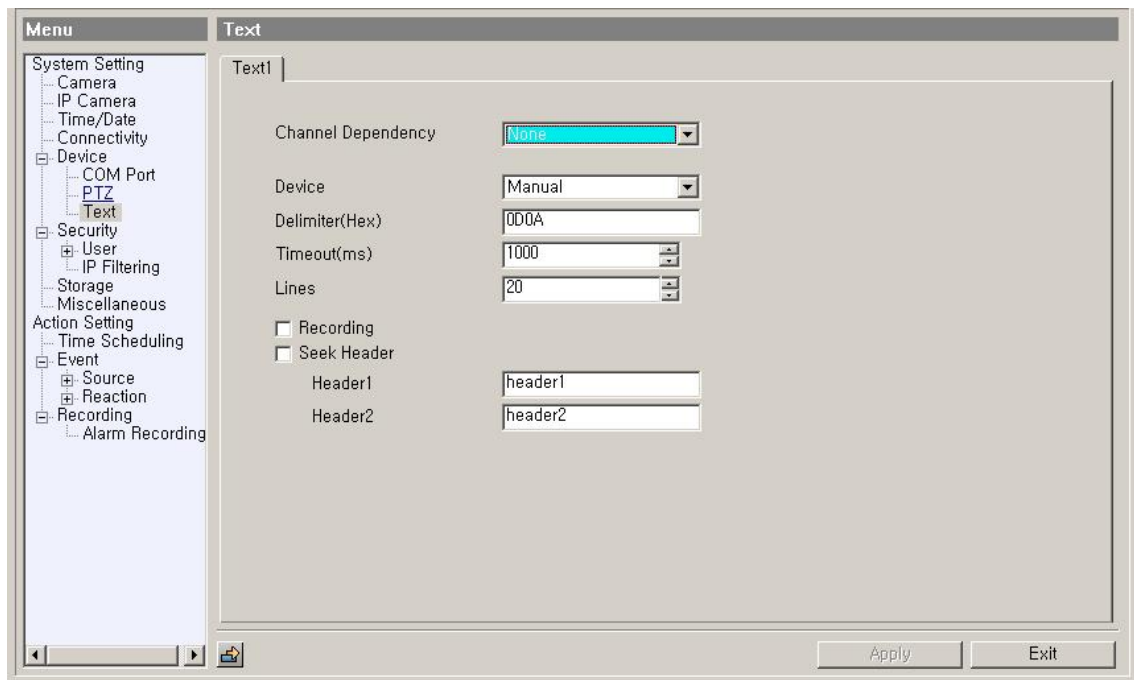

Select channel to text out at Channel Dependency.

- Channel Dependency : Select channel to text out
- Device : Select device to be used for Text input
- timeout(ms) : Set the period for Text out
- Lines : Set text lines
- Recording : Record Text input
- Seek Header : Use Header 1 and 2

20.1.8. Audio

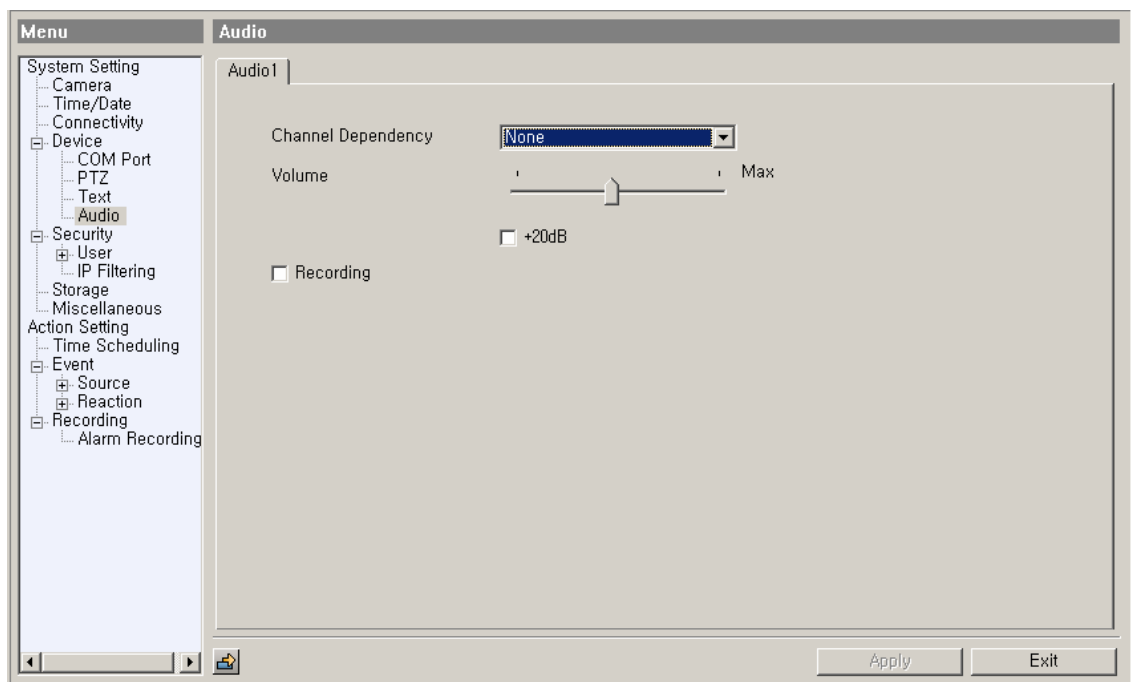

Select channel to play audio at Channel Dependency.

- Channel Dependency : Select channel to play Audio.
- Volume : Set the volume of Audio.
- +20dB : Increase Audio input level when audio level is so low using outer device.
- Recording : Record audio.

20.1.9. User account

	Use	User ID	Password
Admin	<input checked="" type="checkbox"/>	admin	Change
User 1	<input checked="" type="checkbox"/>	user1	Change
User 2	<input checked="" type="checkbox"/>	user2	Change
User 3	<input checked="" type="checkbox"/>	user3	Change
User 4	<input checked="" type="checkbox"/>	user4	Change
User 5	<input checked="" type="checkbox"/>	user5	Change
User 6	<input checked="" type="checkbox"/>	user6	Change
User 7	<input checked="" type="checkbox"/>	user7	Change
User 8	<input checked="" type="checkbox"/>	user8	Change
User 9	<input checked="" type="checkbox"/>	user9	Change
User 10	<input checked="" type="checkbox"/>	user10	Change

20.1.9.1. Setting user account

There are two kinds of user, one is administrator, and the other is common user. The administrator has especially authority relating to changing setting of HVR including all authority. Common user can have all authority except setting.

The administrator ID is fixed as “admin” and you can change only password.

Common user ID can be added up to max 10. Initially from user 1 to user 10 is registered.

20.1.9.2. Setting Local User

	Admin Password	Password	Re-Enter
Admin Password	Off		
User Password	Off		

- Admin Password On/Off

Set the console administrator’s password. The administrator can access for all function.

- User Password On/Off

Set a console user’s password. The user can access for only Monitoring and Playback.

20.1.10. User authority

	Mic	PTZ	Relay	HDD	CH1	CH2	CH3	CH4
user1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
user2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
user3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
user4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
user5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
user6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
user7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
user8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
user9	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
user10	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Authority can be set according to each function such as Mic, PTZ, Relay out, HDD, viewing image. Initially registered user can be given only authority of viewing image of all channels.

20.1.11.IP filtering

Menu

System Setting

Camera

Time/Date

Connectivity

Device

COM Port

PTZ

Security

User

Account

Authority

IP Filtering

Behavior Setting

Schedule Zone

Event

Source

Action

IP Filtering

☐ IP Filtering


Allow

Deny

1	<input type="checkbox"/>	0 . 0 . 0 . 0	•	0 . 0 . 0 . 0
2	<input type="checkbox"/>	0 . 0 . 0 . 0	•	0 . 0 . 0 . 0
3	<input type="checkbox"/>	0 . 0 . 0 . 0	•	0 . 0 . 0 . 0
4	<input type="checkbox"/>	0 . 0 . 0 . 0	•	0 . 0 . 0 . 0
5	<input type="checkbox"/>	0 . 0 . 0 . 0	•	0 . 0 . 0 . 0
6	<input type="checkbox"/>	0 . 0 . 0 . 0	•	0 . 0 . 0 . 0
7	<input type="checkbox"/>	0 . 0 . 0 . 0	•	0 . 0 . 0 . 0
8	<input type="checkbox"/>	0 . 0 . 0 . 0	•	0 . 0 . 0 . 0
9	<input type="checkbox"/>	0 . 0 . 0 . 0	•	0 . 0 . 0 . 0
10	<input type="checkbox"/>	0 . 0 . 0 . 0	•	0 . 0 . 0 . 0

User can give access authority of HVR by using IP filtering. It is allowed to access If IP address is registered “Allow”, and it is not allowed to access except registered IP if IP address is registered “Deny”. Total ten IP can be registered in each category.

20.1.12.Storage

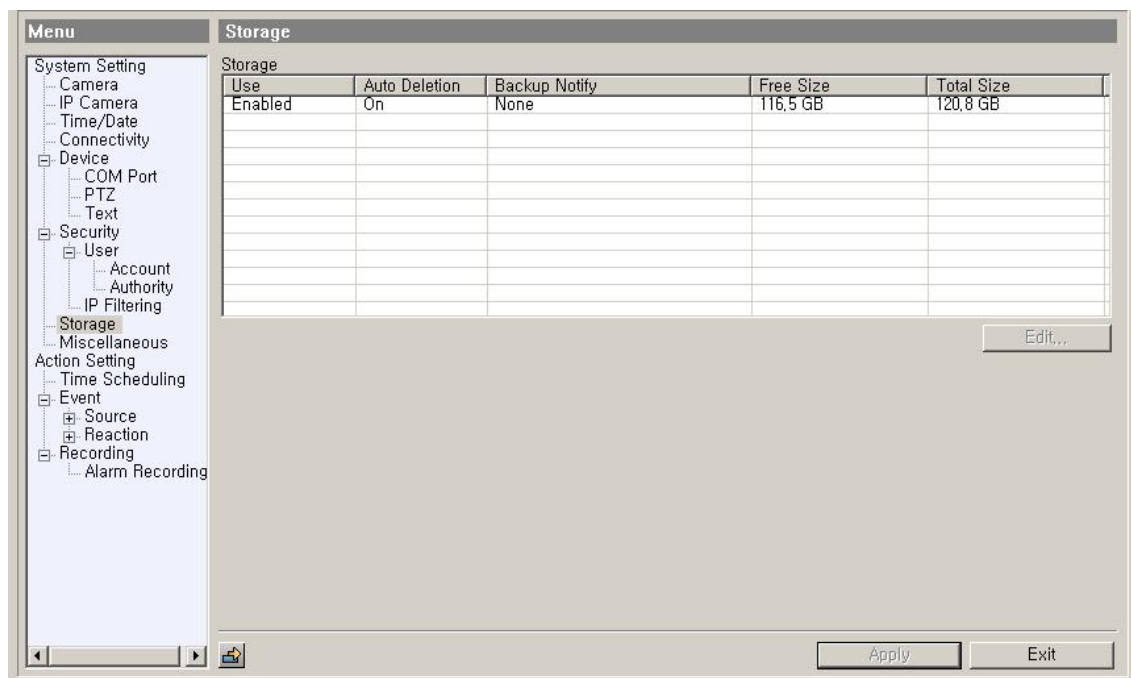


You can check storage status and use the functions such as Auto Deletion, Backup Notify.

- Auto Deletion : If HDD is full, it can delete the old data of HDD automatically and store new data.
- Backup Notify : Notify backup period at the Console as Daily, Weekly, and Monthly (Reminder)

20.1.13. Miscellaneous

- IP Camera Enable : Use IP Camera. (Only HVR-04 is possible)
- No Video Recording : Record No Video
- Night Noise Filter : Use Night Noise Filter

20.1.14. System Log

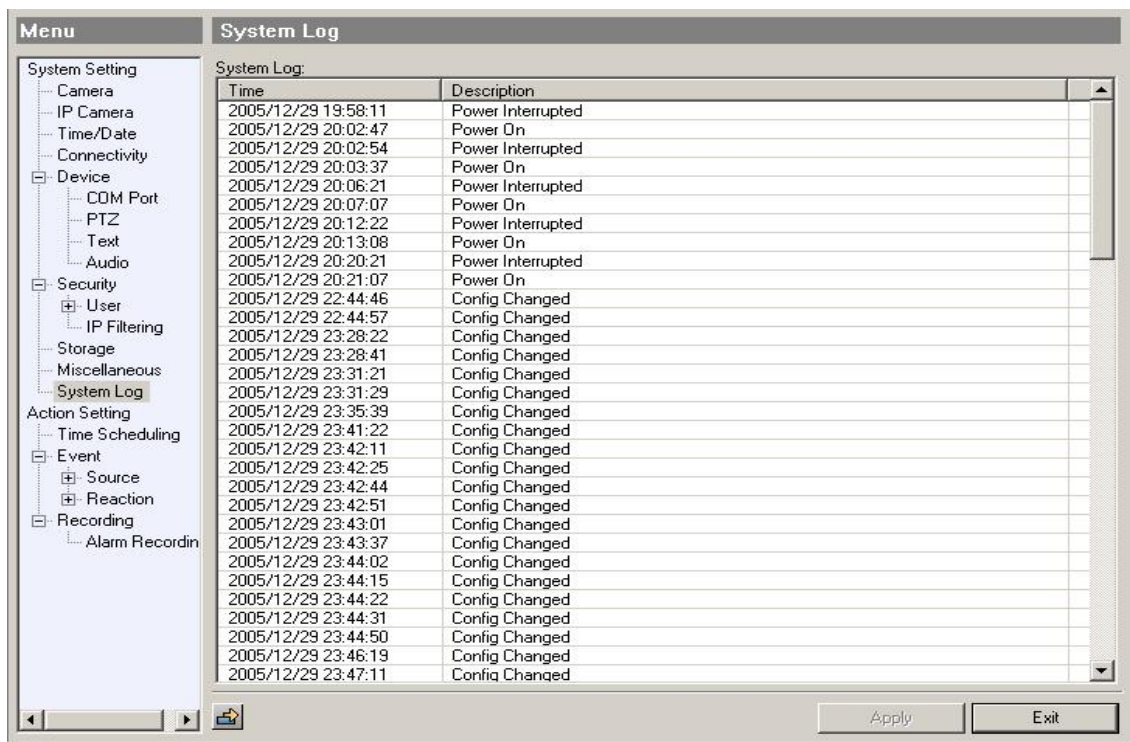

You can check system log. The type of log is as follows.

- Power On** : Turn on power
- Power Off** : Turn off power normal way
- Power Interrupted** : Power is interrupted abnormally
- Config Changed** : Changing setting through menu or DVR Manager
- Record Off Manually** : Stop recording
- Record On Manually** : Restarting recording
- Time Shift Start** : Time information before changing time setting
- Time Shift Finish** : Time information after changing time setting
- Schedule Backup Failed** : Fail to schedule backup, or Fail to finish back up within designated time

20.1.15. Time scheduling

- Weekday : Sets start point and end point of weekday, the remaining day is automatically included in weekend.
- Day : Set start point and end point of day, the remaining hour is automatically included in night.

20.1.15.1. Setting time schedule

Menu

- System Setting
 - Camera
 - IP Camera
 - Time/Date
 - Connectivity
 - Device
 - COM Port
 - PTZ
 - Text
 - Audio
 - Security
 - User
 - Account
 - Authority
 - IP Filtering
 - Storage
 - Miscellaneous
- Action Setting
 - Time Scheduling**
 - Event
 - Source
 - MD
 - Input
 - IP Sensor
 - Reaction
 - Relay/Buzz
 - Email
 - IP Relay
 - Recording
 - Alarm Recording

Time Scheduling

Time Schedule

Weekday: Monday ~ Friday

Day Time: 09:00 ~ 18:00

Special Time

1	12:00	~	13:00
2	18:00	~	19:00
3	00:00	~	00:00
4	00:00	~	00:00

Apply Exit


Special time can be set up to max four. User can set repeated time zone of the day (e.g. lunch time, dinner time).

Special time can be set up to max four. User can set repeated time zone (e.g. lunch time, dinner time).


20.1.15.2. Setting special time

Special time can be set up to max four. User can set repeated time zone (e.g. lunch time, dinner time).

20.1.16.MD

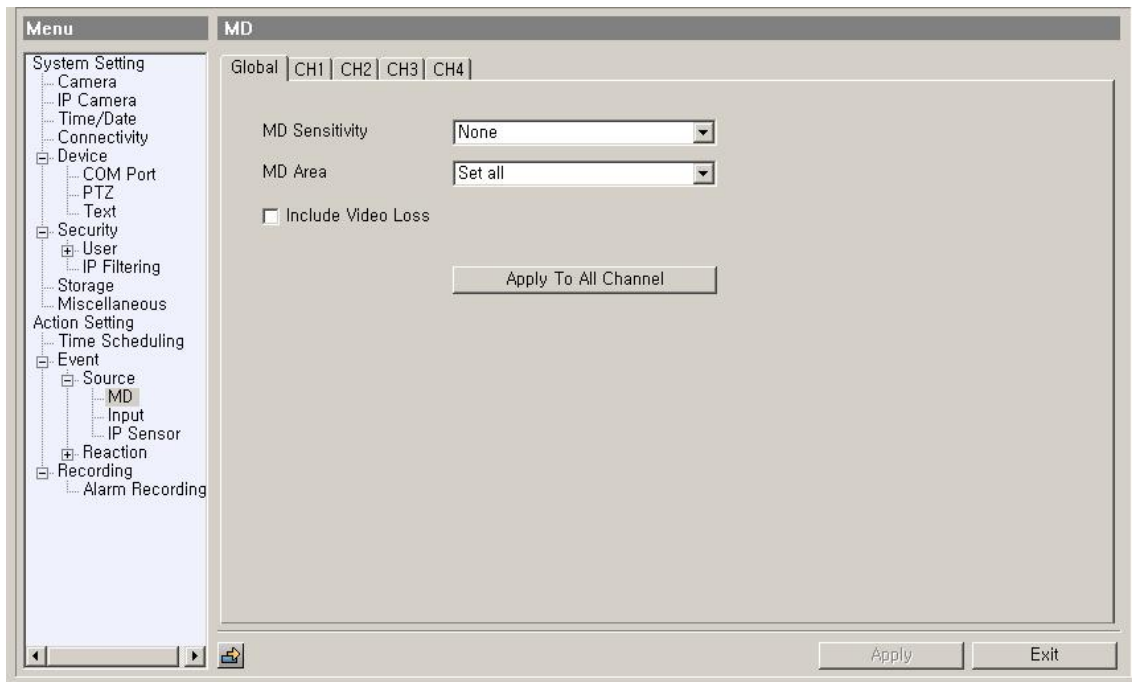

Set to activate Motion Detection of all channel. MD Sensitivity can be set. If set as “None”, motion detection of relevant channel will not be running.

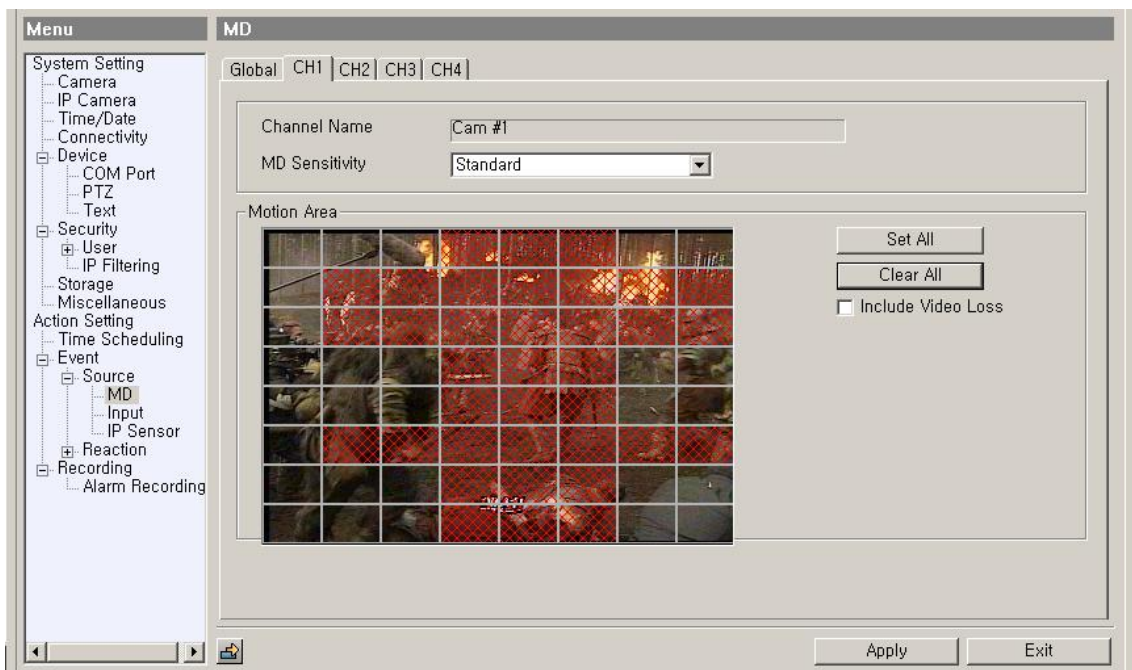

Set to activate motion diction according to each channel. Motion Area can be set.

20.1.17.Input

S1	S2	S3	S4	S5	S6
NO	NC	NO	NO	NO	NO

Set sensor type.

(NC : Normal Close, NO : Normal Open)

20.1.18.IP sensor


S5 | S6 | S7 | S8 | S9 | S10 | S11 | S12 | S13 | S14 | S15 | S16

IP Camera Number: IP Camera 5

IP Camera Sensor Number: IP Camera Sensor 1

Set sensor of IP Camera (Only HVR-04 is possible)

20.1.19.Relay / Buzzer / Email

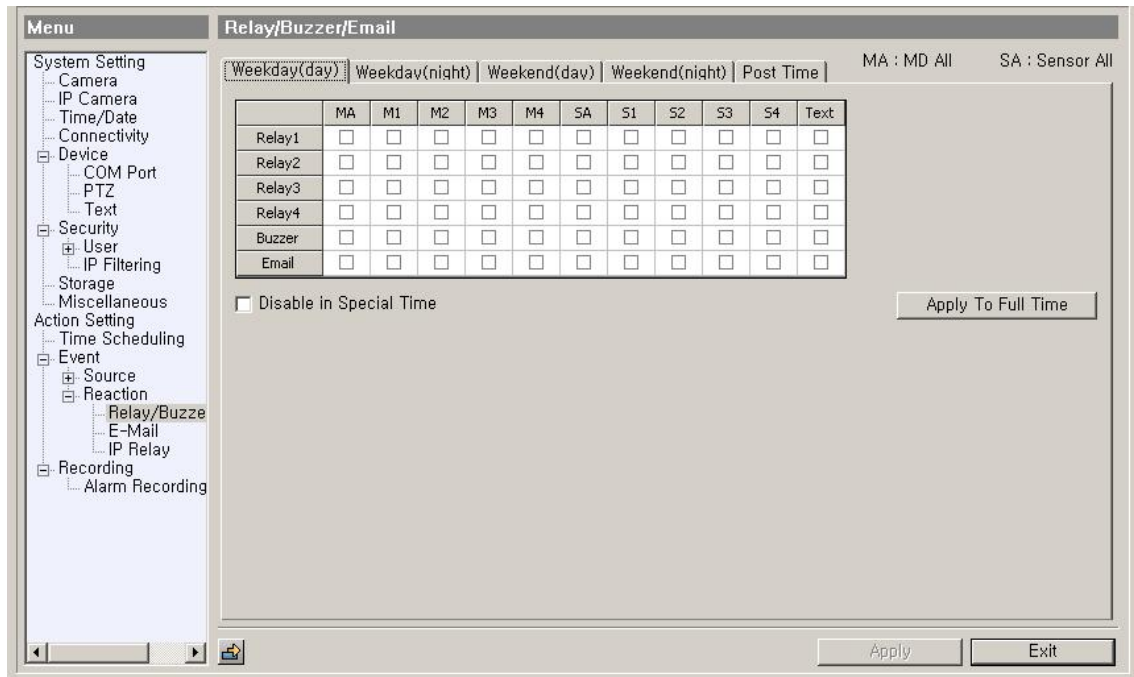

Run relay out relating to sensor input, motion detection and so on. Relay out can be set according to 4 time zone (weekday/weekend, day/night)

- Selecting time schedule : Select 4 time zone (Weekday(Day), Weekday(Night), Weekend(Day), Weekend(Night)).
- Relay source : Select event source to run relevant relay. (MD1~MD6, S1~S6)
- Not applying special time : Function not to run relay during special time.
- Relay Post Time : Set the duration time when relay is running after event. Duration time can be set according to each relay (5 ~ 60 seconds).

<Note>

1. Time zone can be set in the Schedule Zone page.
2. Special time can be set up to four and it is set in the “Schedule Zone” page.

20.1.20.E-Mail

The screenshot shows a software interface for configuring email settings. On the left is a 'Menu' tree with categories like System Setting, Device, Security, and Event. The 'E-Mail' option under 'Event' is selected. The main area is titled 'E-Mail' and contains the following fields:


- Recipient:** A text input field.
- Sender:** A text input field.
- Mail Duration:** A dropdown menu currently set to 'Off'.
- Send mail when:** A section containing a button labeled 'HDD Fail' and an unchecked checkbox below it.

At the bottom right of the window are 'Apply' and 'Exit' buttons.

User can receive email about event information


- Received Address : Enter received address
- Sending Address : User can easily recognize which DVR sent email if its installed place including mail address is entered in advance
- Mail Duration : Mail is sent according to designated duration. Duration can be set by minute (1minute ~30 minute)
- Send Mail Important event is transmitted by relevant email

20.1.21.IP relay

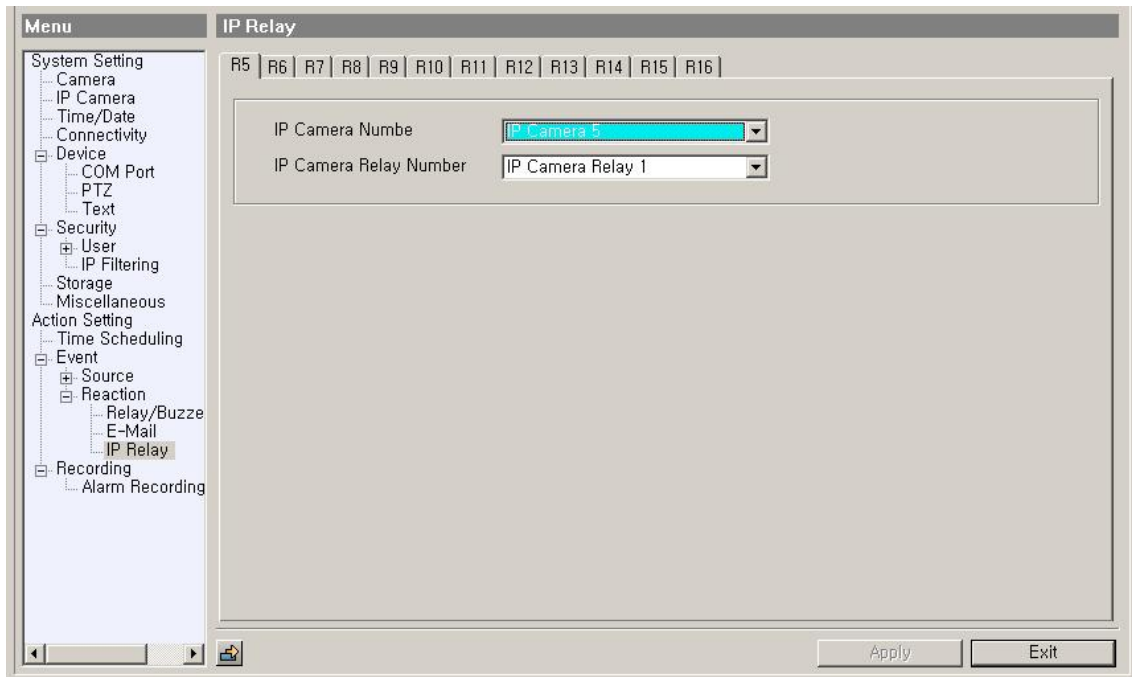

Set relay of IP Camera (Only HVR-04 is possible)

20.1.22.Recording

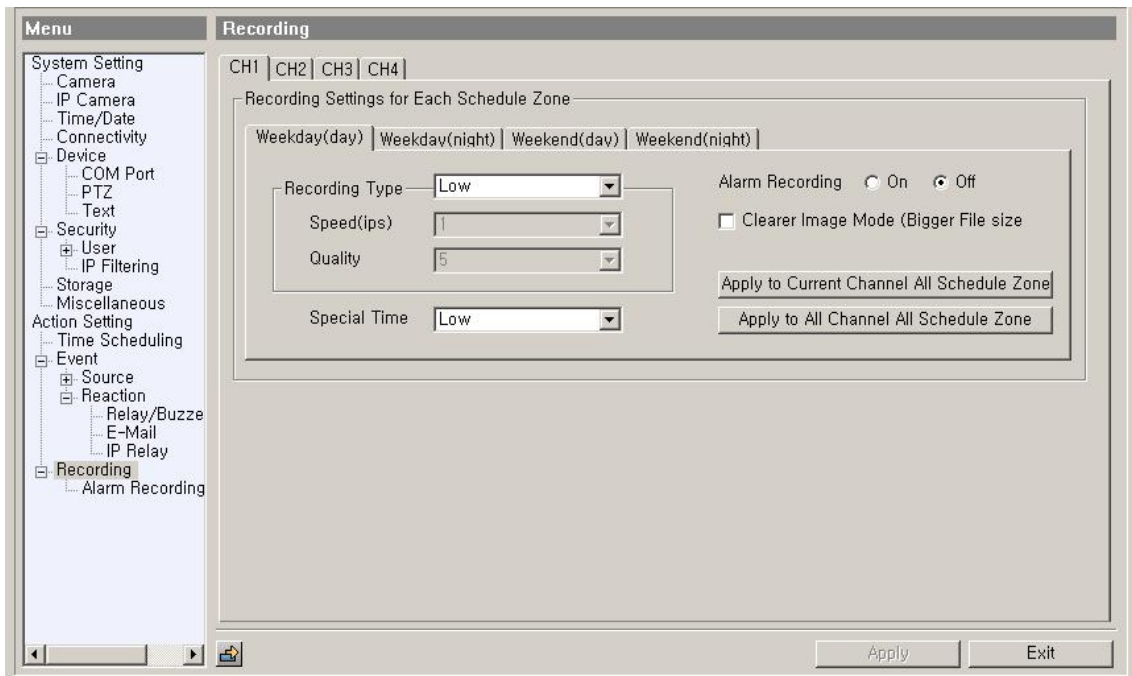

- Recording Type : Select recording type (Low ~ High Recording)
- Speed(ips) : Set recording speed
- Resolution : Set recording resolution
- Special Time : Set recording speed and resolution of Special Time zone. Special Time zone can be set in the Schedule Zone page.
- Clearer Image Mode : Function to provide more clearer image
- Alarm Recording : Set Alarm Recording "ON / OFF"

20.1.23. Alarm recording

Menu

- System Setting
 - Camera
 - IP Camera
 - Time/Date
 - Connectivity
 - Device
 - COM Port
 - PTZ
 - Text
 - Audio
 - Security
 - User
 - Account
 - Authority
 - IP Filtering
 - Storage
 - Miscellaneous
 - Action Setting
 - Time Scheduling
 - Event
 - Source
 - MD
 - Input
 - IP Sensor
 - Reaction
 - Relay/Buzz
 - Email
 - IP Relay
 - Recording
 - Alarm Recording

Alarm Recording

CH1 CH2 CH3 CH4 CH5 CH6 CH7 CH8 CH9 CH10 CH11 CH12 CH13 CH14 CH15 CH16

Alarm Source

	Sensor				MD				Text
Rec/Preset Src	1	None	None	None	1	None	None	None	Off
Preset Act.	None	None	None	None	None	None	None	None	None

Apply to All Channel

Recording Settings

Recording Type: Standard (Sec)

Speed(ips): 5

Quality: 5

Pre Alarm: 10 (Sec)

Post Alarm: 20 (Sec)

☒ Clearer Image Mode (Bigger File size)

Apply to All Channel

"This page is for setting alarm parameters only. To apply the above recording settings, go to the 'Recording' menu and enable the 'Alarm Recording On' button."

Sensor Pairing MD Pairing

Apply Exit

Set alarm recording.

Set "Alarm Recording" button "On" to activate it. Alarm recording can be set On/Off according to each Schedule Zone.

Alarm modes are as follows, and select alarm to be used.

	Sensor				MD				Text
Rec/Preset Src	1	None	None	None	1	None	None	None	Off
Preset Act.	None	None	None	None	None	None	None	None	None

- MD : When motion is detected
- Text : When text information is transmitted through serial .
- S1 ~ S16 : When sensor is input.

- Speed(ips) : Alarm recording speed.
- Resolution : Alarm image resolution .
- Pre Alarm : Set to record images starting from a length of second before alarm occurs.
- Post Alarm : Set to stop recording images after a length of second when alarm occurs
- Sensor Pairing : Pairing means channel runs Sensor 1 by 1.
- MD Pairing : Pairing means channel runs MD 1 by 1..

DVR Manager ConfigStation

Information	Content
Model Name	DS412
H/W Version	1.0.0
S/W Version	1.8.2
Serial Number	D20040410028
IP Address	10.10.10.2
MAC Address	00:30:a1:80:24:cd
Description	DVR0

User name:

Password:

Port:

☒ Save Password

21. Login and Configuration

Select DVR from the My DVR or Local Area DVR folder.


Click “Login” button after entering a password.

<Note>

- In the Monitor and Playback program, the user ID can access to DVR, but only admin ID can access to it in the ConfigStation.
- Default password of admin ID is ‘admin’.
- If the configuration menu of corresponding DVR is ‘active’ or Remote Setup is ‘Disable’, login won’t be accepted.
- In the ConfigStation, it can be accessed to Local Area DVR, but password cannot be saved.
- After editing configuration of each tab, you should press “Apply” button. In case of moving to another tab or DVR, you will see the dialog box to be asked the changed configuration.

21.1. Information Tab

The first screen after login, which displays basic information of DVR.

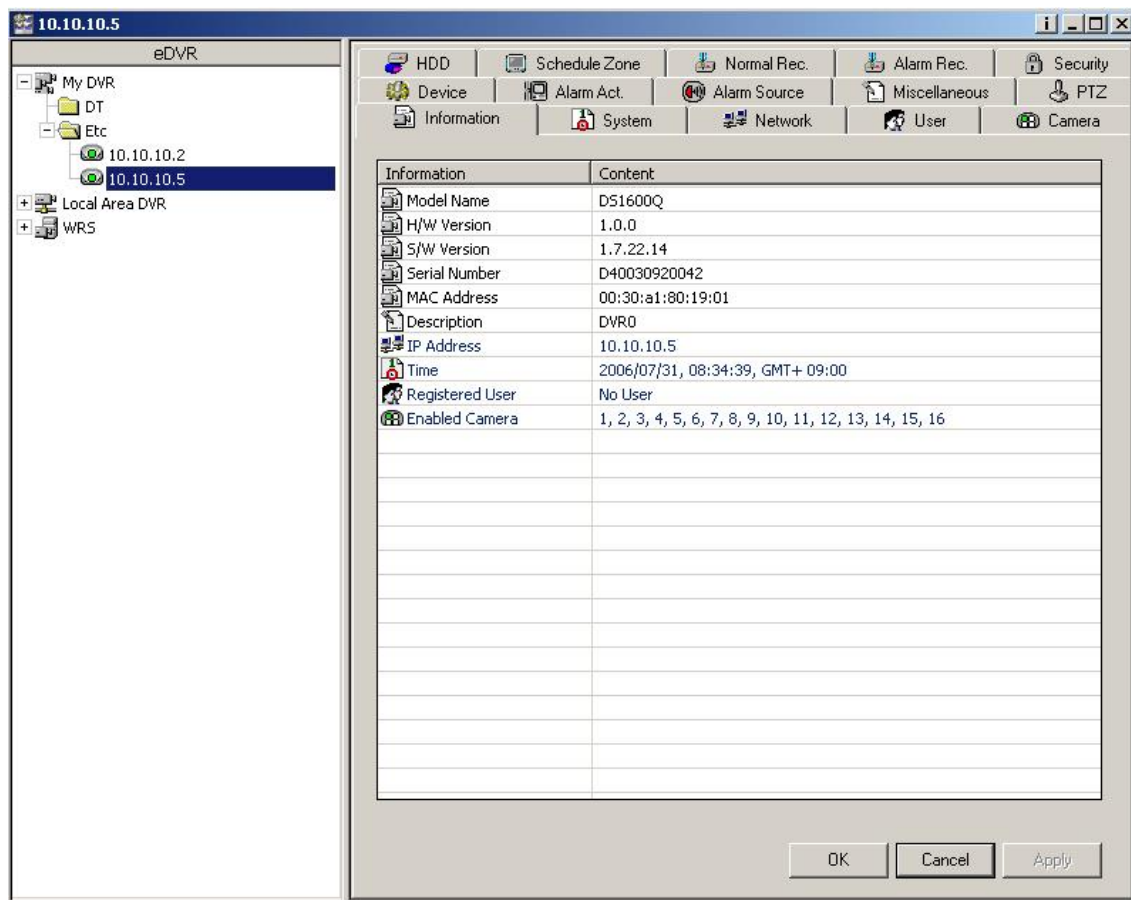


<Note>

- If you double-click the item in green, it moves to the corresponding tab.

21.2. System Tab

Display Date/Time information.

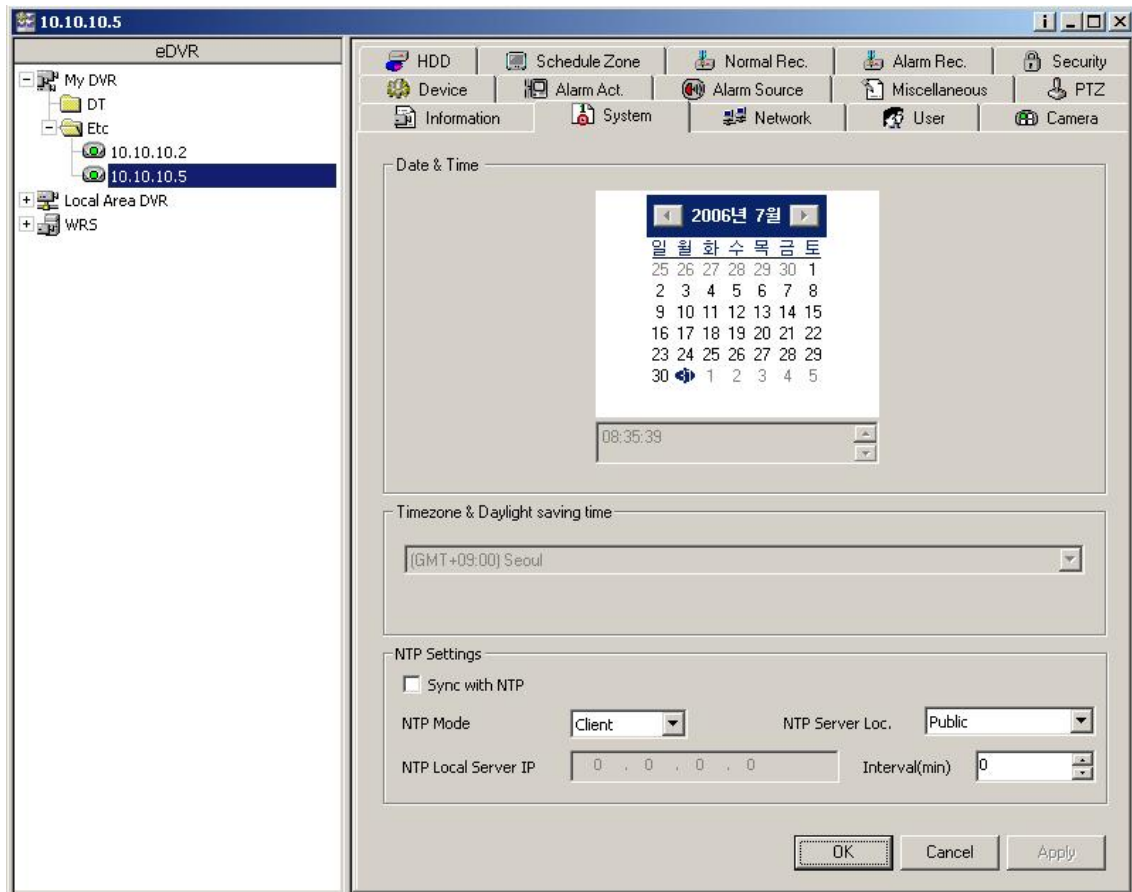

<Note>

- The Date/Time of DVR cannot be configured at the remote site.
- Please refer to the corresponding DVR User's Guide for Date/Time, Network (NTP Setting) configuration.

21.3. Network Tab

Network configuration such as Ethernet IP Address, xDSL, SWR registration, and Port configuration.


The screenshot shows a software window titled "10.10.10.5" with a sidebar on the left and a main configuration area on the right. The sidebar, labeled "eDVR", contains a tree view with "My DVR" (containing "DT" and "Etc"), "Local Area DVR" (containing "10.10.10.2" and "10.10.10.5"), and "WRS". The "10.10.10.5" item is selected. The main area has a top menu bar with icons for HDD, Schedule Zone, Normal Rec., Alarm Rec., Security, Device, Alarm Act., Alarm Source, Miscellaneous, PTZ, Information, System, Network (selected), User, and Camera. The "Network" tab is active, showing several sections: "Ethernet" with fields for IP Address (10.10.10.5), Network Mask (255.255.0.0), Gateway Address (10.10.10.1), and a checkbox for "DHCP Enable"; "xDSL (PPPoE)" with a checkbox, User ID (guest), Password (masked), and status "xDSL Server Status : xDSL not connected."; "DNS" with fields for DNS#1, DNS#2, and DNS#3, all set to 0.0.0.0; "WRS" with fields for Registration Interval (0 sec), Registration Server (webeye.to), and Group ID (newbie); and "Port Assignment" with radio buttons for "Normal" (selected) and "Firewall", and an "Advanced" button. At the bottom right are "OK", "Cancel", and "Apply" buttons.

<Note>

- Please refer to Network Configuration Part of the corresponding DVR User’s Guide.

21.4. User Tab

It is to configure ID at the remote site; administrator ID is fixed as 'admin' and can be changed password only. The user authority configures PTZ control availability, HDD access, DO (Digital Out) control availability, and monitoring available channel.

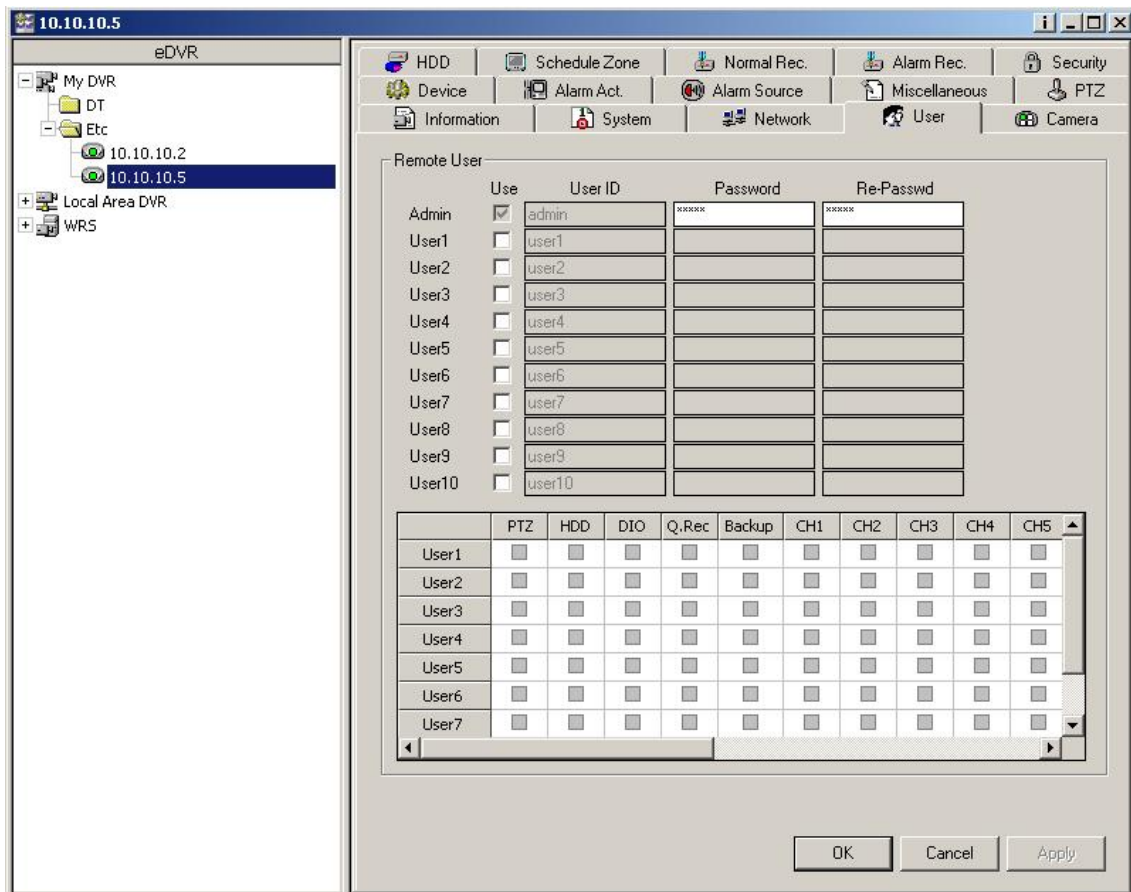


<Note>

- The number of remote user ID excluding 'Admin' is 10.
- It is separately managed with Admin/User under DVR console and configuration can only be through ConfigStation.
- The default password of admin ID is 'admin'.

21.5. Camera Tab

Configure the status of video channel connected DVR such as PTZ Port, Video Gain, Brightness, and Contrast.

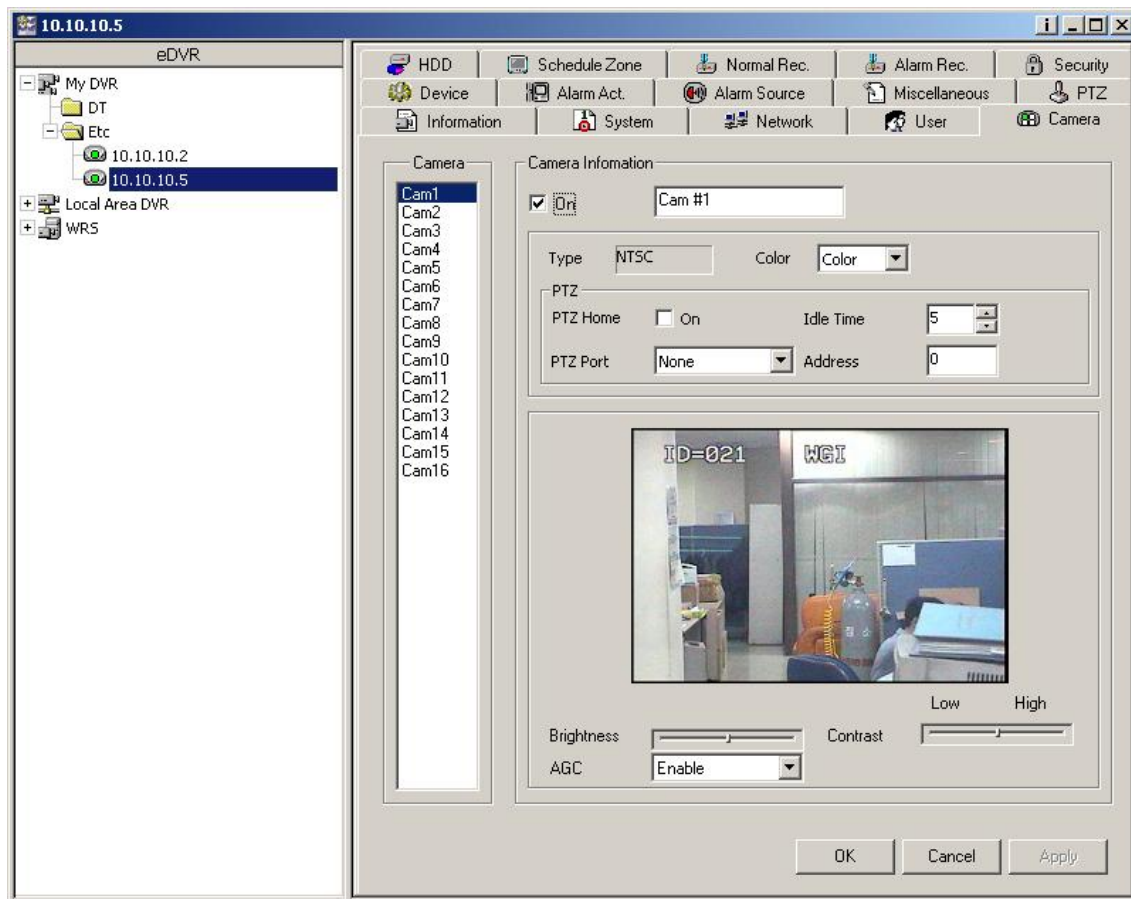


<Note>

- Please refer to Camera Configuration Part of the corresponding DVR User's Guide.

21.6. HDD Tab

Display the status of recording HDD information and can configure Repeat availability, Backup Reminder, and so on.

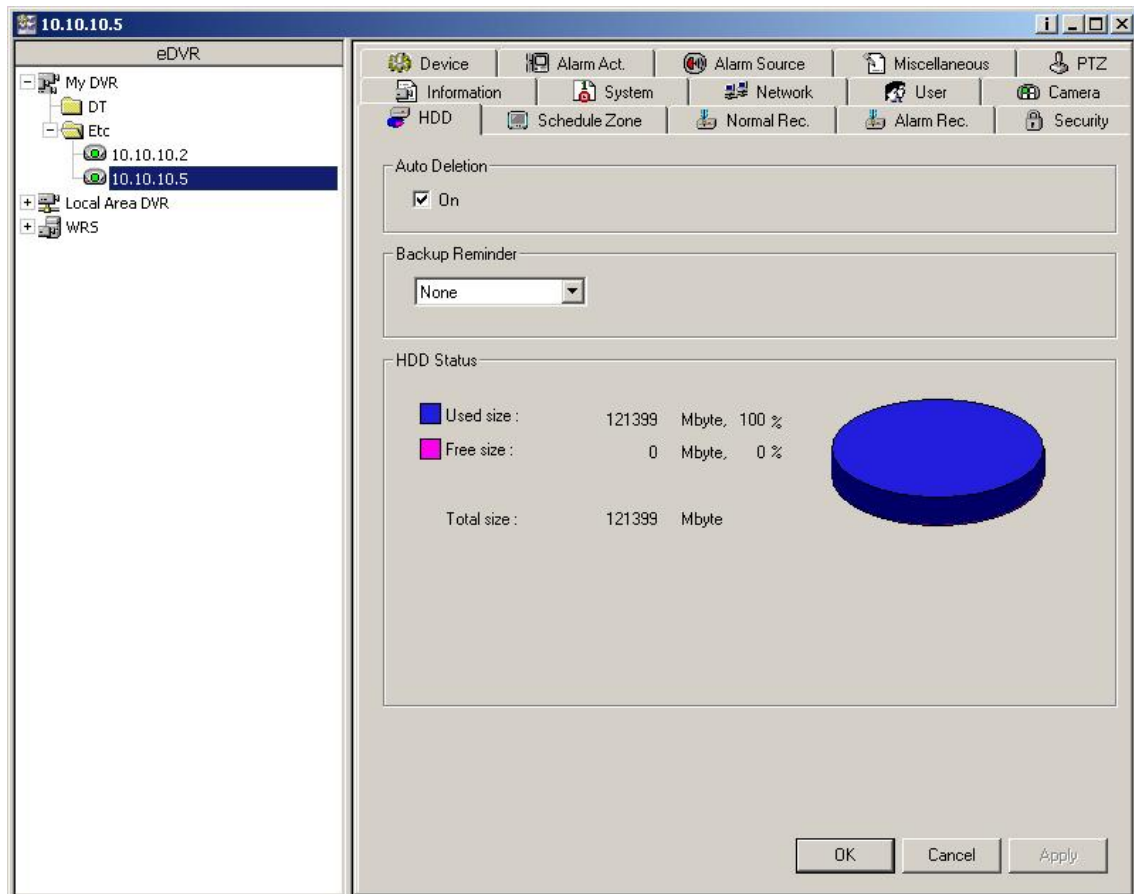


<Note>

- Please refer to HDD Setup Part of the corresponding DVR User's Guide.

21.7. Schedule Zone Tab

Configure primary of recording schedule (Time/Zone) such as Weekday, Day time, and Special Time zone.

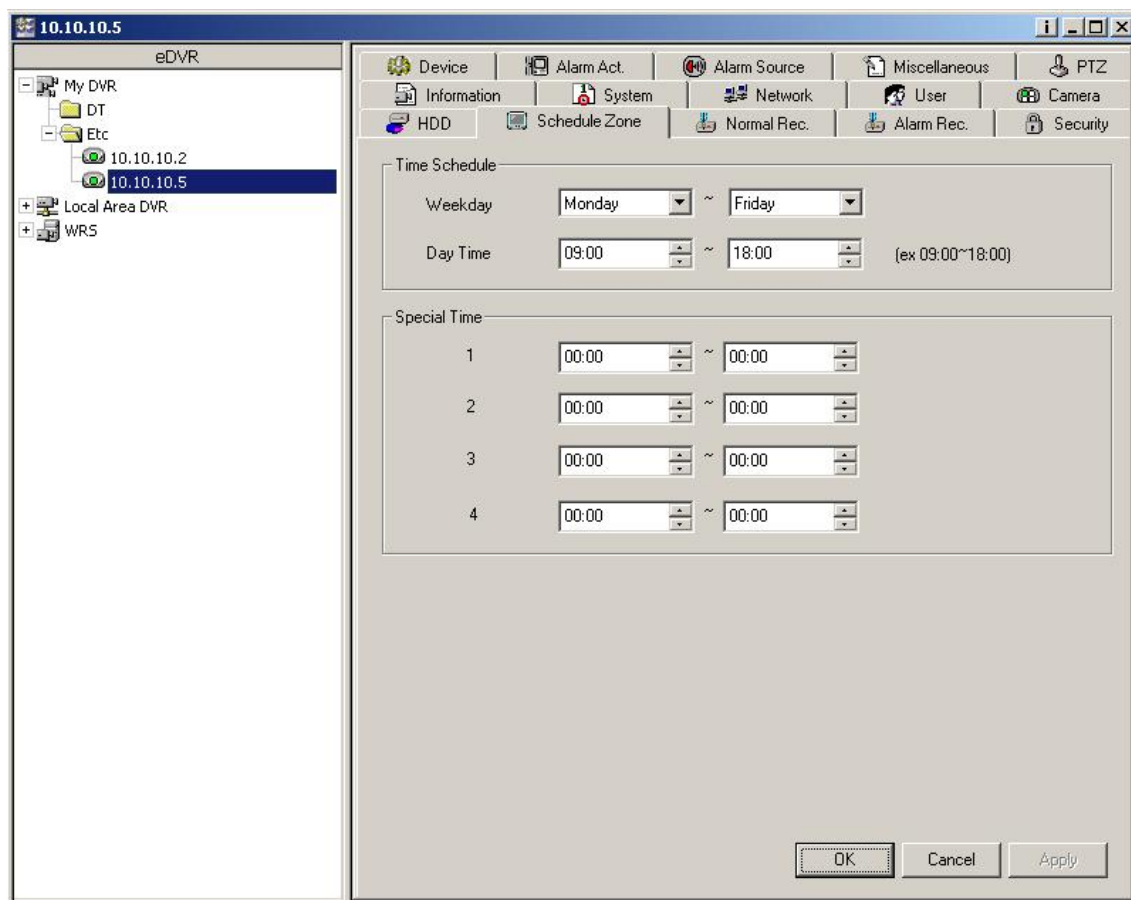


<Note>

– Please refer to Time Schedule and Special Time Configuration Part of the corresponding DVR User's Guide.


21.8. Normal Rec Tab

Configure normal recording condition according to the configured time/zone in schedule zone.

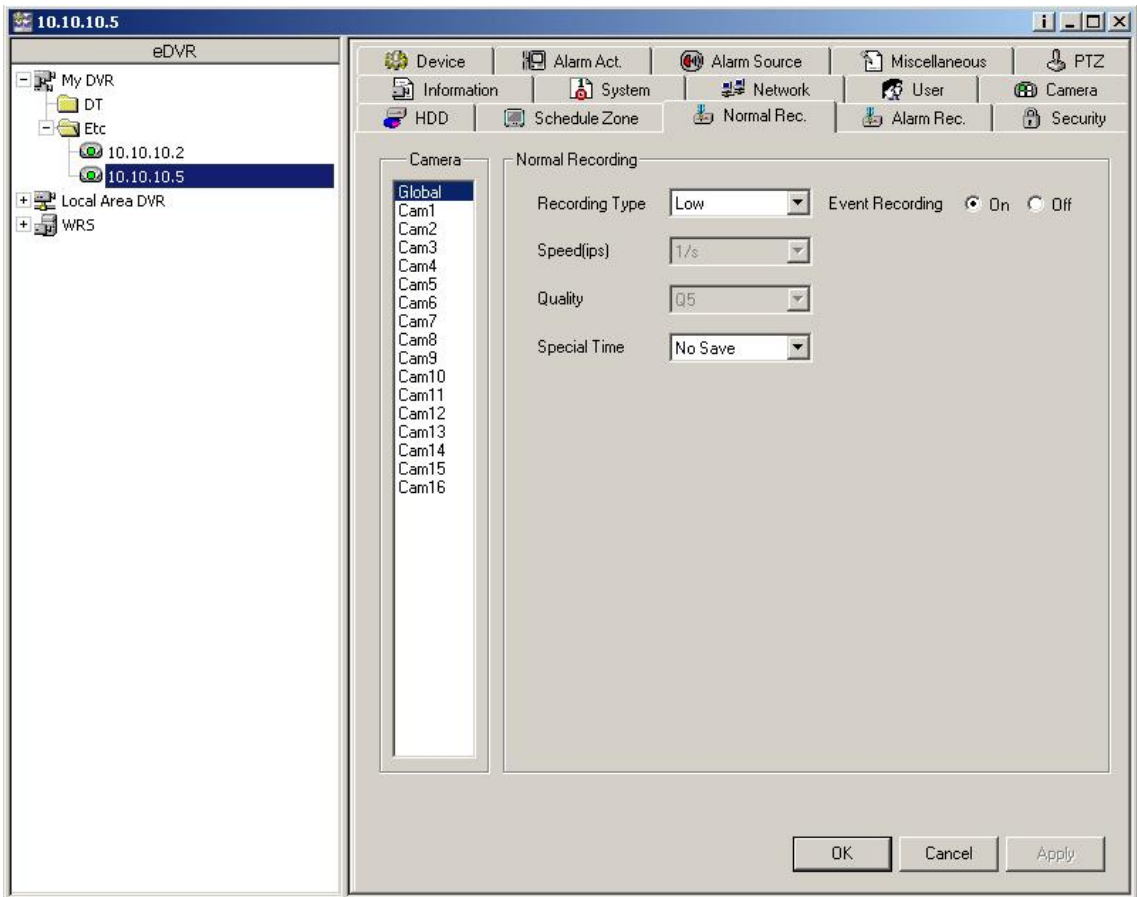

21.9. Alarm Rec Tab

Configure the condition for Alarm Recording

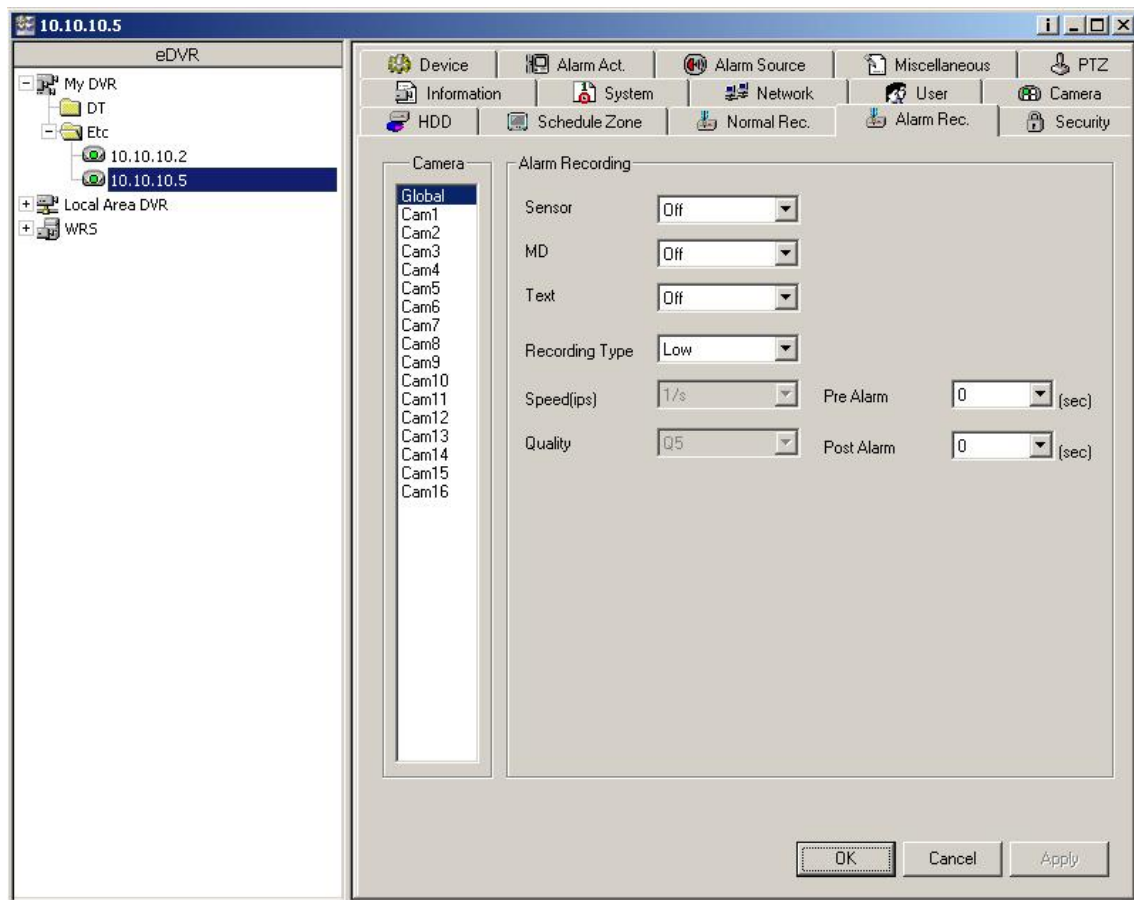


<Note>

- Please refer to Normal and Alarm Rec. Configuration Part of the corresponding DVR User's Guide.

21.10. Security Tab

Configure connectable IP address from the remote site. Check 'Allow' or 'Deny' from the registered IP address list and register IP address range.

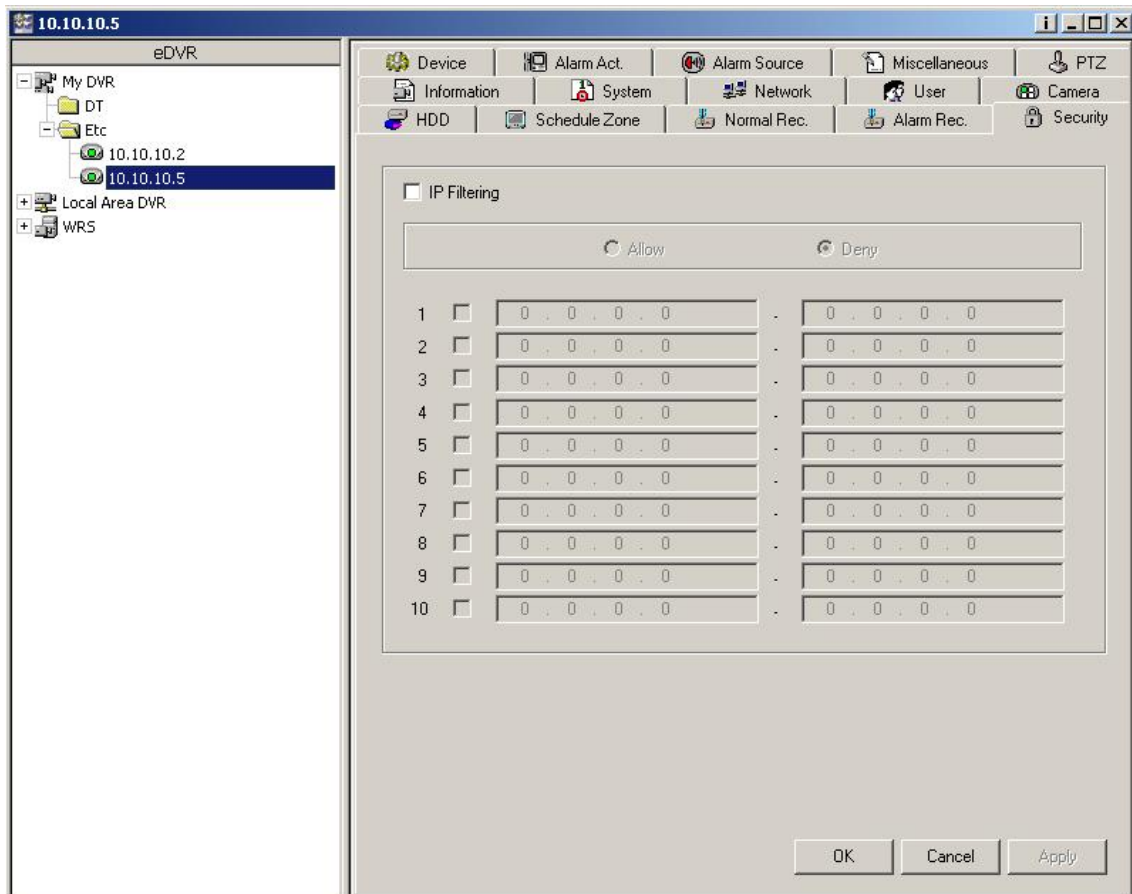


<Note>

- Configure connectable IP to DVR, which is different from DVR Security Configuration part and can only configure through ConfigStation.
- In case of wrong configuration, it cannot be connected from the remote site and you should reset it at the corresponding DVR.

21.11. Device Tab

Configure Audio, Recording, and PTZ.

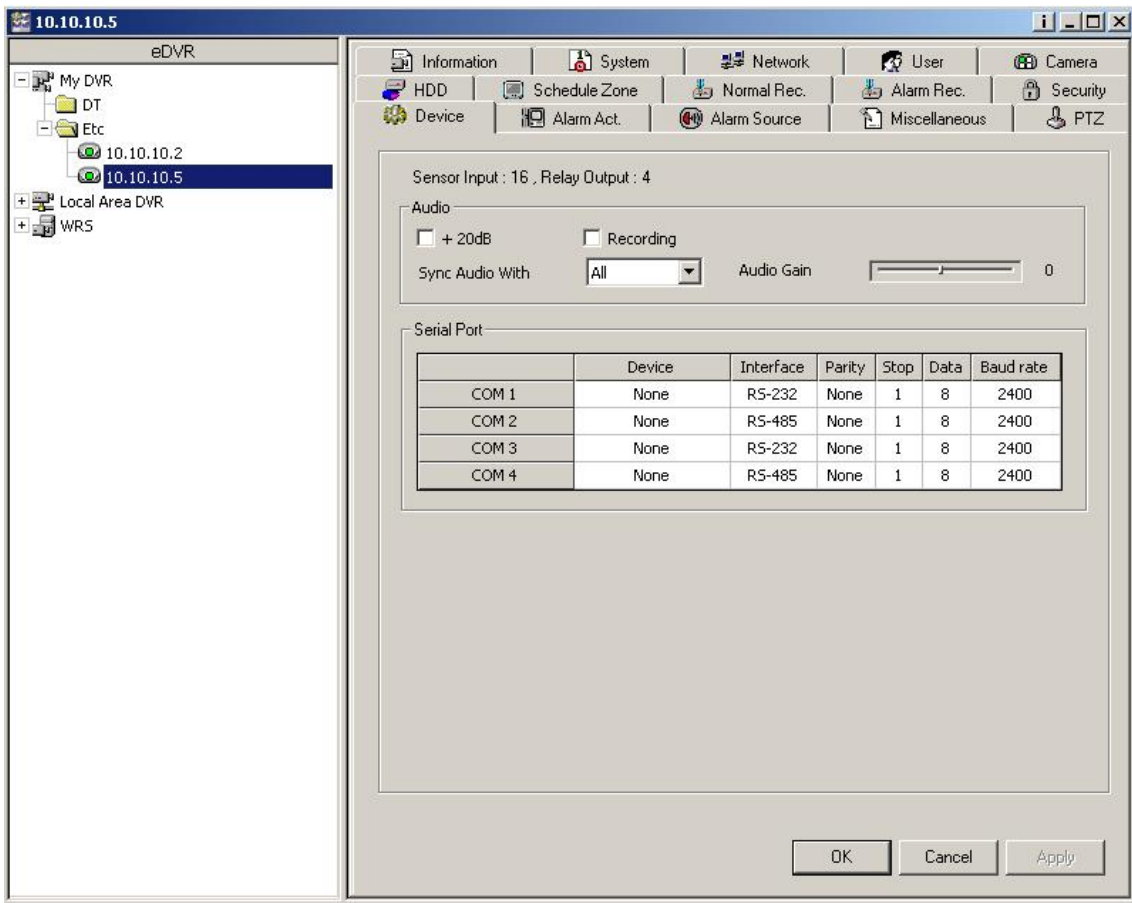

<Note>

– Please refer to Audio, Serial Setup Configuration Part of the corresponding DVR User’s Guide.

21.12. Alarm Act Tab

Configure Schedule and Operation Time of relay-out.


The screenshot shows the 'Alarm Act' configuration window. The left sidebar displays a tree view of the DVR structure, with '10.10.10.5' selected under 'My DVR'. The main window has a tabbed interface, with 'Alarm Act.' currently selected. The 'Schedule' section allows configuring alarm actions for different time periods (Weekday day/night, Weekend day/night). For each period, there are checkboxes for 'Any', 'Sensor', 'Any', 'MD', and 'Text' for Relay1, Relay2, Relay3, Relay4, Buzzer, and E-Mail. A 'Disable in Special Time' checkbox is also available. A 'Globally Apply' button is located at the bottom right of the schedule section. The 'Setup' section below the schedule section contains dropdown menus for setting the duration of each alarm action (Relay1, Relay2, Relay3, Relay4, Buzzer) in seconds, all currently set to 10. It also includes a 'Sending Interval(Min)' dropdown set to 'Off', and input fields for 'E-Mail' and 'SMTP' addresses. At the bottom right of the window are 'OK', 'Cancel', and 'Apply' buttons.

<Note>

- Please refer to Alarm Act Configuration Part of the corresponding DVR User's Guide.


21.13. Alarm Source Tab

Configure Alarm Source of Sensor, MD, Text, and so on.

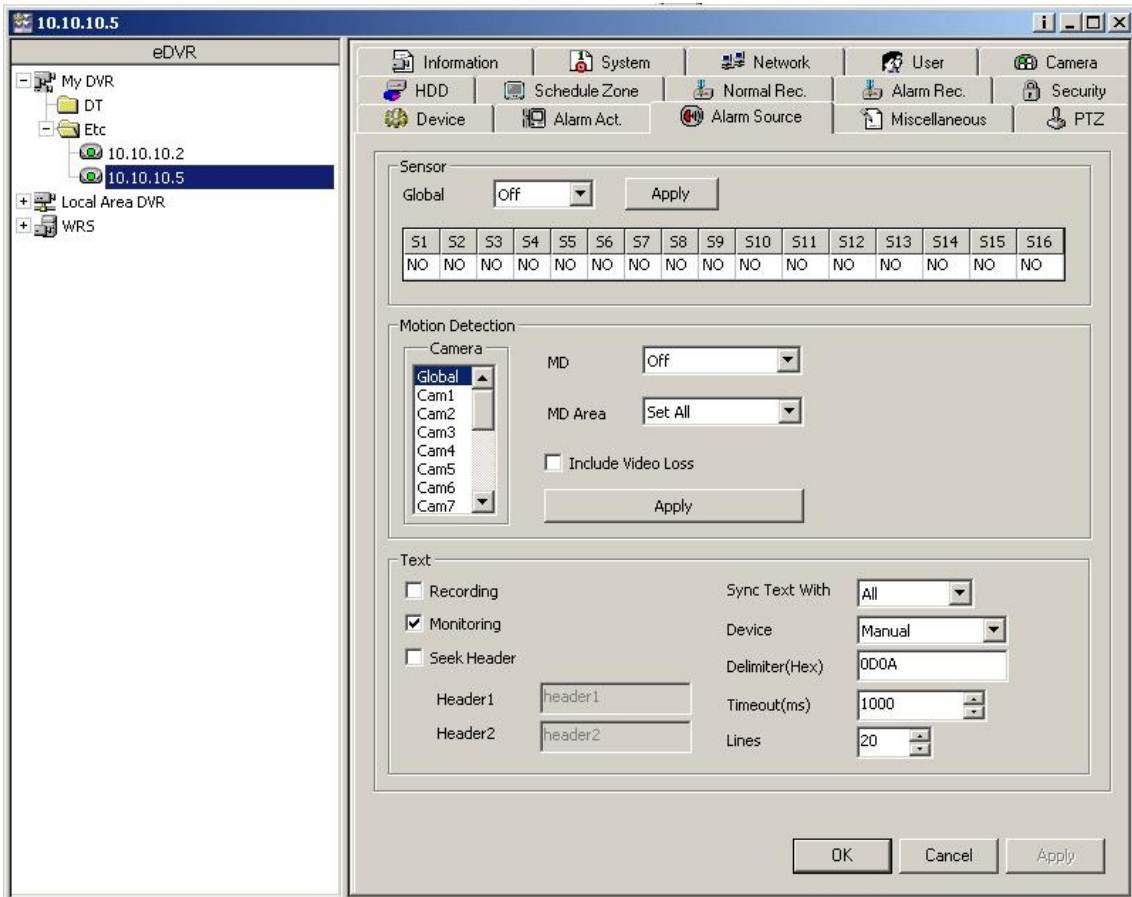


21.14. Miscellaneous Tab

In case of “No Video”, configure recording and IP Cam availability.

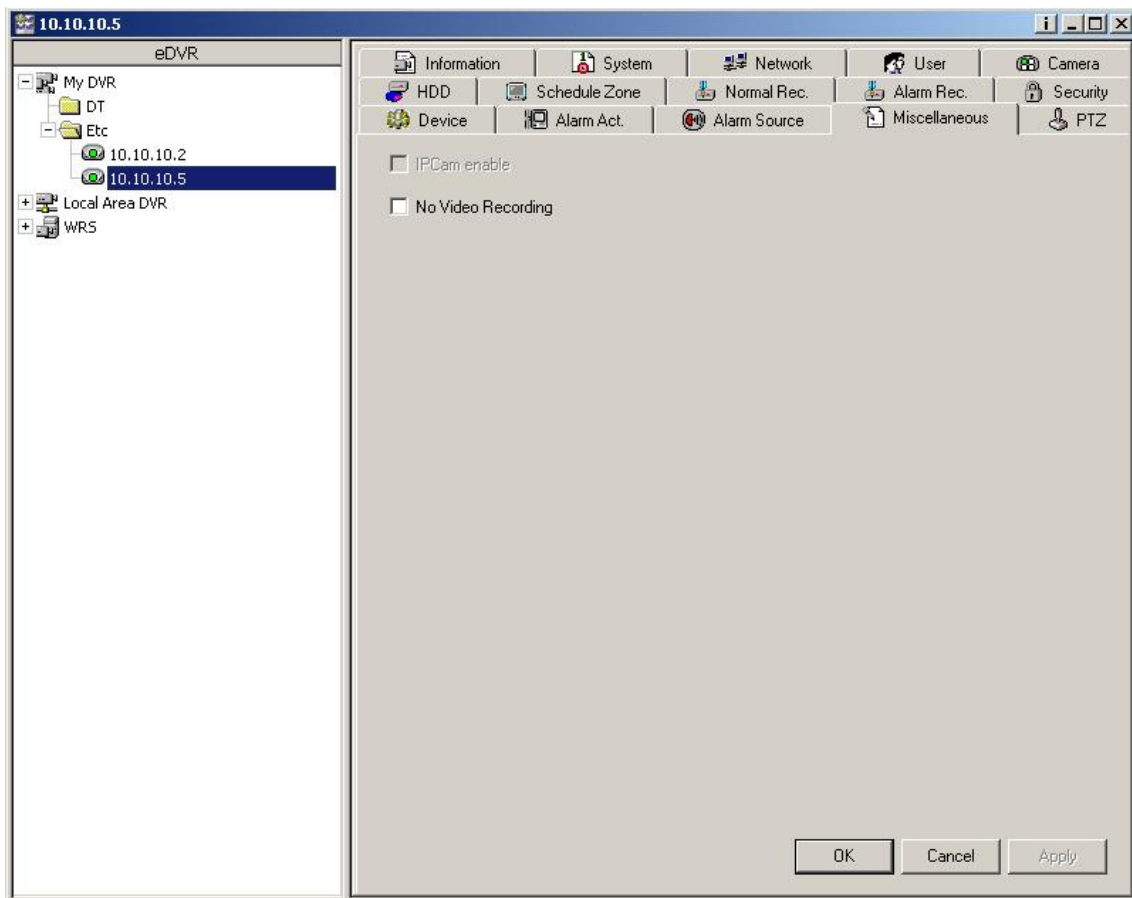

21.15. PTZ Tab

Configure Preset and Aux setting of each camera.

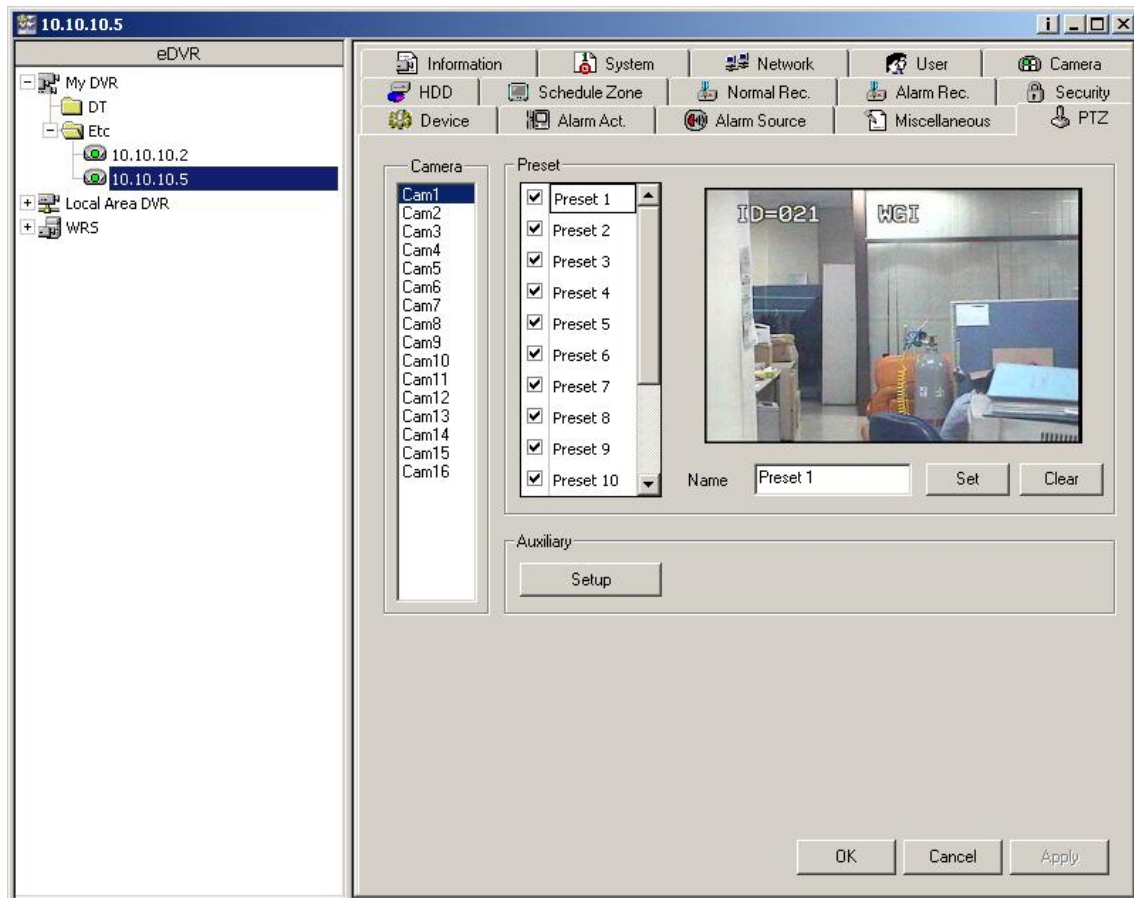

Hunt Electronic USA

978 W. 10th Street

Azusa, CA 91702

Tel : (626) 812-8868

Fax : (626) 812-8828

info@huntectv.com

www.huntectv.com